

1/4, 1/8 and 1/16 DIN Controllers, Indicators & Profilers User Guide



Manual Part Number: 59321-1

Price:

\$15.00

This manual supplements the Concise Product manual supplied with each instrument at the time of shipment. Information in this installation, wiring and operation manual is subject to change without notice.

Copyright © July 2003, Danaher Controls, all rights reserved. No part of this publication may be reproduced, transmitted, transcribed or stored in a retrieval system, or translated into any language in any form by any means without the written permission of Danaher Controls.

Copies of this manual are available in electronic format on the Danaher Controls web site (www.dancon.com) Printed versions are available from Danaher Controls or its agents at the price published on the front cover.

Note:

It is strongly recommended that applications incorporate a high or low limit protective device, which will shut down the equipment at a preset process condition in order to prevent possible damage to property or products.



WARNING

THE INTERNATIONAL HAZARD SYMBOL IS INSCRIBED ADJACENT TO THE REAR CONNECTION TERMINALS. IT IS IMPORTANT TO READ THIS MANUAL BEFORE INSTALLING OR COMMISSIONING THE UNIT.

Products covered by this manual are suitable for Indoor use, Installation Category II, Pollution category 2 environments.

This user guide covers the Partlow Plus series product range.
Products covered in this issue of the manual:

P1400, P1160 & P1800

Future editions will include other models as they are released:

Warranty and Returns Statement

These products are sold by Danaher Controls under the warranties set forth in the following paragraphs. Such warranties are extended only with respect to a purchase of these products, as new merchandise, directly from Danaher Controls or from a Partlow distributor, representative or reseller and are extended only to the first buyer thereof who purchases them other than for the purpose of resale.

Warranty

These products are warranted to be free from functional defects in material and workmanship at time of manufacture and to conform at that time to the specifications set forth in the relevant Partlow instruction manuals sheet or sheets, for such products for a period of three years.

THERE ARE NO EXPRESSED OR IMPLIED WARRANTIES, WHICH EXTEND BEYOND THE WARRANTIES HEREIN AND ABOVE SET FORTH. DANAHER CONTROLS MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE PRODUCTS.

Limitations

Danaher Controls shall not be liable for any incidental damages, consequential damages, special damages, or any other damages, costs or expenses excepting only the cost or expense of repair or replacement as described above. Products must be installed and maintained in accordance with the Partlow instructions. There is no warranty against damage to the product resulting from corrosion. Users are responsible for the suitability of the products to their application.

For a valid warranty claim, the product must be returned carriage paid to the supplier within the warranty period. The product must be properly packaged to avoid damage from Electrostatic Discharge or other forms of harm during transit.

Contents

Warranty and Returns Statement	iv
Contents	v
How to use this manual	1
1 Introduction	3
2 Installation	4
2.1 Unpacking	4
2.2 Installation	4
2.3 Panel Cut-outs	5
2.4 Panel-Mounting	5
3 Plug-in Options	7
3.1 Options Modules And Functions	7
3.2 Auto Detection Of Option Modules	7
3.3 Preparing To Install Or Remove Options Modules	9
3.4 Removing/replacing Option Modules	9
3.5 Replacing the Instrument in its Housing	10
4 Wiring Instructions	11
4.1 Installation Considerations	11
4.2 AC Power Wiring - Neutral (for 100 to 240V AC versions)	11
4.3 Wire Isolation	11
4.4 Use of Shielded Cable	12
4.5 Noise Suppression at Source	12
4.6 Sensor Placement (Thermocouple or RTD)	13
4.7 Connections and Wiring	13
4.8 Power Connections - Mains Powered Instruments	16
4.9 Power Connections - 24/48V AC/DC Powered Instruments	16
4.10 Universal Input Connections - Thermocouple (T/C)	17
4.11 Universal Input Connections - RTD input	17
4.12 Universal Input Connections - Linear Volt, mV or mA input	18
4.13 Secondary Input Connections – Digital Input	18
4.14 Secondary Input Connections – Heater Current Input	19
4.15 Secondary Input Connections - Remote Setpoint Input	19
4.16 Option Slot A Connections - RS485 Serial Communications Module	19
4.17 Option Slot A Connections - Digital Input Module	20

4.18	Option Slot 1 - Relay Module	20
4.19	Option Slot 1 - SSR Driver Module	21
4.20	Option Slot 1 - Triac Module	21
4.21	Option Slot 1 - Linear Voltage or mADC module.....	22
4.22	Option Slot 2 - Relay Module	22
4.23	Option Slot 2 - Dual Relay Module.....	22
4.24	Option Slot 2 - SSR Driver Module	23
4.25	Option Slot 2 - Triac Module	24
4.26	Option Slot 2 - Linear Voltage or mADC module.....	24
4.27	Option Slot 3 - Relay Module	24
4.28	Option Slot 3 - SSR Driver Module	25
4.29	Option Slot 3 - Linear Voltage or mADC module.....	25
4.30	Option Slot 3 - Transmitter Power Supply Module	26
5	Powering Up.....	27
5.1	Powering Up Procedure	27
5.2	Overview Of Front Panel	27
5.3	Displays.....	28
5.4	LED Functions	28
5.5	Switches	29
6	Error/Faults Conditions	30
7	Instrument Operation Modes	31
7.1	Select Mode.....	31
7.1.1	Entry into the Select Mode.....	31
7.1.2	Navigating in Select Mode.....	31
7.2	Unlock Codes.....	32
7.3	Automatic Tune Mode	32
7.3.1	Navigating in Automatic Tune Mode	33
7.4	Product Information Mode.....	34
7.4.1	Navigating in the Product Information Mode.....	34
7.5	Lock Code View	35
7.5.1	Entry and Navigating in Lock Code View Mode.....	35
P1160, P1800 & P1400 Controller – Model Group.....		36
P1160, P1800 & P1400 Controllers - Configuration Mode		36
8.1.1	Entry into the Configuration Mode.....	36
8.1.2	Scrolling Through Parameters and Values	37

8.1.3	Changing the Parameter Value.....	37
P1160, P1800 & P1400 – Set Up Mode		43
8.2.1	Entry into the Set Up Mode.....	44
8.2.2	Scrolling Through Parameters & Values	44
8.2.3	Changing the Parameter	44
P1160, P1800 & P1400 Controllers - Operator Mode.....		48
P1160, P1800 & P1400 Controllers – Extended Operator Mode.....		48
8.3.2	Navigating in Operator Mode.....	48
8.4	Adjusting the Setpoint.....	50
8.5	Adjusting the Setpoint Ramp Rate	50
8.6	Manual Control Mode.....	51
8.6.1	Selecting/deselecting Manual Control Mode.....	51
9	Manual Tuning Controllers.....	52
9.1	Controllers Fitted With Primary Output Only.....	52
9.2	Controllers Fitted With Primary and Secondary Outputs.....	53
9.3	Manual Fine Tuning.....	54
10	Modbus Serial Communications	55
10.1	Physical Layer.....	Error! Bookmark not defined.
10.2	Link Layer.....	55
10.3	Device Addressing	57
10.4	Supported Modbus Functions.....	57
10.5	Function Descriptions	57
10.5.1	Read Coil/Input Status (Function 01 / 02).....	58
10.5.2	Read Holding/Input Registers (Function 03 / 04)	58
10.5.3	Force Single Coil (Function 05).....	59
10.5.4	Pre-Set Single Register (Function 06)	59
10.5.5	Loopback Diagnostic Test (Function 08)	60
10.5.6	Pre-Set Multiple Registers (Function 10 Hex)	60
10.5.7	Exception Responses	61
11	ASCII Communications	62
11.1	Physical Layer.....	62
11.2	Device Addressing	62
11.3	Session Layer.....	62
11.3.1	Type 1 Message	64
11.3.2	Type 2 Message	64

11.3.3	Scan Tables	65
11.3.4	Type 3 Message	65
11.3.5	Type 4 Message	66
11.4	Error Response	66
12	Application Layer	67
12.1	Parameters	67
12.1.1	Bit Parameters	67
12.1.2	Word Parameters	68
12.2	Communications Parameter Details	73
12.2.1	Communications Write	73
12.2.2	Equipment ID	73
12.2.3	Date of Manufacture	74
12.2.4	Hardware Configuration (1)	74
12.2.5	Hardware Configuration (2)	75
12.2.6	Product Revision Level	75
12.2.7	Firmware Version	75
13	Calibration Mode	76
13.1	Equipment Required For Checking or Calibrating the Universal Input	76
13.2	Calibration Check	76
13.3	Recalibration Procedure	77
14	Appendix 1 - Glossary	79
15	Appendix 2- Specification	94
15.1	Universal Input	94
15.1.1	General Input Specifications	94
15.1.2	Thermocouple	94
	Thermocouple Ranges Available	94
	Thermocouple Performance	95
15.1.3	Resistance Temperature Detector (RTD)	96
	RTD Ranges Available	96
	RTD Performance	96
15.1.4	DC Linear	97
	DC Linear Ranges Available	97
	DC Linear Performance	97
15.2	Digital Inputs	97
15.3	Output Specifications	98

15.3.1	Output Module Types	98
15.3.2	Generic Output Specifications	98
15.4	Control	100
15.5	Alarms	100
15.6	Digital Communications	101
15.7	Reference Conditions	101
15.8	Operating Conditions	101
15.9	Standards	102
15.10	Physical Specifications	102
16	Appendix 3 - Product Coding	103

List of Figures

Figure 1 - Main dimensions	4
Figure 2 - Panel cut-outs.....	5
Figure 3 - Panel-Mounting the instrument.....	6
Figure 4 - Typical rear view (uncased) showing PCBs positions	7
Figure 5 - Location of Option Modules	9
Figure 6 - Option Module Connectors	10
Figure 7 - Transient suppression with inductive coils	12
Figure 8 - Contact noise suppression.....	13
Figure 9 - Rear terminals (^{1/16} -DIN Instruments).....	14
Figure 10 - Rear terminals (^{1/4} -DIN & ^{1/8} -DIN Instruments)	15
Figure 11 - Mains Power Connections	16
Figure 12 - 24/48V AC/DC Power Connections.....	16
Figure 13 - Thermocouple Input Connections.....	17
Figure 14 - RTD Input Connections.....	17
Figure 15 - DC Volt, mV & mA Input Connections	18
Figure 16 - Secondary Digital Input Connections	18
Figure 17 - Heater Current Input Connections.....	19
Figure 18 - Remote Setpoint Input Connections.....	19
Figure 19 - Option Slot A – RS485 Serial Communications Module.....	20
Figure 20 - Option Slot A – Digital Input Module.....	20
Figure 21 - Option Slot 1 - Relay Module.....	20
Figure 22 - Option Slot 1 - SSR Driver Module.....	21
Figure 23 - Option Slot 1 - Triac Module.....	21
Figure 24 - Option Slot 1 - Linear Voltage or mADC Module	22
Figure 25 - Option Slot 2 - Relay Module.....	22
Figure 26 - Option Slot 2 - Dual Relay Module	23
Figure 27 - Option Slot 2 - SSR Driver Module.....	23
Figure 28 - Option Slot 2 - Triac Module.....	24
Figure 29 - Option Slot 2 - Linear Voltage or mADC module	24
Figure 30 - Option Slot 3 - Linear Voltage or mADC module	25
Figure 31 - Option Slot 3 - SSR Driver Module.....	25
Figure 32 - Option Slot 2 - Linear Voltage or mADC module	25
Figure 33 - Option Slot 3 - Transmitter Power Supply Module.....	26

Figure 34 - Typical front panels.....	27
Figure 35 - Manual Tuning	53
Figure 36 - Link Layer.....	56
Figure 37 - Alarm Hysteresis Operation	79
Figure 38 - Alarm Operation.....	80
Figure 39 - Overlap and Deadband	86
Figure 40 - Pre-Tune Operation	87
Figure 41 - Self-Tune Operation	91

List of Tables

Table 1 - Option Module vs. Model Matrix	8
Table 2 - LED functions	28
Table 3 - Error/Faults conditions	30
Table 4 - Model Groups	31
Table 5 - Available modes	32
Table 6 - Lock code values	32
Table 7 - Automatic Tune Mode	33
Table 8 - Product description parameters	34
Table 9 - Lock Codes	35
Table 10 - P1160, P1800 & P1400 Configuration Mode Parameters	37
Table 11 - P1160, P1800 & P1400 Set Up Mode parameters	44
Table 12 - P1160, P1800 & P1400 Operator mode displays	49
Table 13 – Supported Modbus Functions	57
Table 14 - Read Coil/Input Status (Function 01/02)	58
Table 15 - Read Holding/Input Registers (Function 03/04)	58
Table 16 - Force Single Coil (Function 05)	59
Table 17 - Pre-Set Single Register (Function 06)	59
Table 18 - Loopback Diagnostic Test (Function 08)	60
Table 19 - Pre-Set Multiple Registers (Function 10 Hex)	60
Table 20 - Exception Responses	61
Table 21 - Parameter Key	63
Table 22 - Data Element – Sign/Decimal Point Position	63
Table 23 - Standard scan table	65
Table 24 - VMD control mode scan table	65
Table 25 - Bit Parameters	67
Table 26 - Word Parameters	68
Table 27 - Hardware Configuration (1)	74
Table 28 - Hardware Configuration (2)	75
Table 29 - Firmware Version	75
Table 30 - Calibration phases	77
Table 31 - Logical Alarm Operation	84

How to use this manual

Each section of this manual is structured to give information required for all aspects of the installation and use and of the product:

Section 1: **Introduction** - gives a brief description of the product range.

Section 2: **Installation** - contains step-by-step instructions for unpacking, installing and panel mounting the instrument.

Section 3: **Plug-in Options** – explains installation of the plug-in option modules.

Section 4: **Wiring Guidelines** - gives guidance on good wiring practice, noise avoidance, wiring diagrams and input/output connections.

Section 5: **Powering Up** - explains the powering up procedure and gives a brief description of the displays and switches.

Section 6: **Error Messages** – explains the various error or fault indication displays.

Section 7: **Operation Modes** - contains a description of all the operation modes common across the range. These include Select Mode for gaining access to the Setup and Configuration menus, Automatic tuning on controllers and the Product information menu.

Section 8: **P1160, P1800 & P1400 Model Group** - contains a description of all menus unique to the three controllers in this model group. These include Configuration Mode, Setup Mode and the normal Operator Mode menus. It also details adjustment of the controller setpoint and the use of manual control mode.

Section 9: **Manually Tuning Controllers** – gives advice on manually adjusting the PID controller tuning parameters.

Section 10: **Modbus Serial Communications** – contains details of the physical layer and message formats used in the Modbus serial communications protocol common to all products in the range.

Section 12: **ASCII Serial Communications** – contains details of the physical layer and message formats used in ASCII serial communications protocol available (in addition to Modbus) in some products in the range.

Section 12: **Serial Communications Application Layer** – contains details of the parameter addressing for both Modbus and ASCII serial communications protocols.

Section 13: **Calibration Mode**- contains step-by-step instructions to calibrate the instrument. This section is intended for use by an engineer.

APPENDIX 1: **Glossary** – explains the terms used in this manual and the features of the products.

APPENDIX 2:**Specification** - contains the technical specifications for all instruments in the range.

APPENDIX 3:**Product Coding** - contains the product model/ordering codes for the range.

1 Introduction

These instruments are microprocessor based indicators, single loop controllers, and profilers capable of measuring, displaying or controlling process variables such as temperature, pressure, flow and level from a variety of inputs. Control functions, alarm settings and other parameters are easily entered through the front keypad or by using the PC based configuration software. Controller models are easily tuned using the instruments automatic tuning features. EEPROM technology protects against data or configuration loss during AC power outages.

Inputs are user configurable for direct connection to thermocouple and RTD probes. Most models will also accept linear process signal types such as mVDC, VDC or mADC.

If the instrument is configured with a linear output option module, this output can be scaled to re-transmit the process variable or setpoint to external devices such as data recorders or PLC's.

The operating voltage is either 100-240 VAC, 50/60 Hz power supply or 24V-48V AC/DC power supply depending on the model purchased.

Alarm indication is standard on all instruments; up to three alarms are possible on some models. The alarm types may be set as process high or low, deviation (active above or below controller setpoint), band (active both above and below setpoint), or control loop type. Models with a heater current input also have high, low or short circuit heater break alarms based on control load current. These alarms can be linked to any suitable output.

Alarm status is indicated by an LED and the alarm status screen.

If the instrument is configured with the transmitter power supply option module, an unregulated 24V DC (22mA) auxiliary output voltage is provided to power external signal transmitters.

Controllers can be programmed for on-off, time proportioning, or current proportioning control implementations, depending on the output modules fitted. A secondary control output is available when the appropriate extra output module is fitted. Valve Motor Drive (VMD) is also possible on some models. All proportional control implementations are provided with fully programmable PID parameters. Controllers with analogue Remote Setpoint inputs and Profile Controllers are included in the range.

2 Installation

2.1 Unpacking

1. Remove the product from its packing. Retain the packing for future use, in case it is necessary to transport the instrument to a different site or to return it to the supplier for repair/testing.
2. The instrument is supplied with a panel gasket and push fit fixing strap. A single sheet concise manual is also supplied in one or more language. Examine the delivered items for damage or defects. If any are found, contact the courier immediately.

2.2 Installation

CAUTION

Installation and configuration should be performed only by personnel who are technically competent and authorised to do so. Local regulations regarding electrical installation and safety must be observed. Dimensions

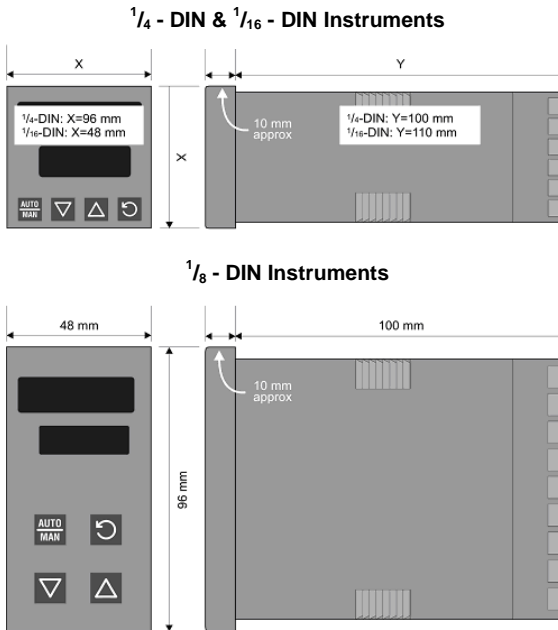


Figure 1 - Main dimensions

2.3 Panel Cut-outs

The mounting panel must be rigid and may be up to 6.0mm (0.25 inches) thick. The cut-outs required for the instruments are shown below. Instruments may be mounted side-by-side in a multiple installation for which the cut-out width (for n instruments) is:

1/8 & 1/16 DIN Instruments: $(48n - 4)$ mm or $(1.89n - 0.16)$ inches

1/4 DIN Instruments: $(96n - 4)$ mm or $(3.78n - 0.16)$ inches

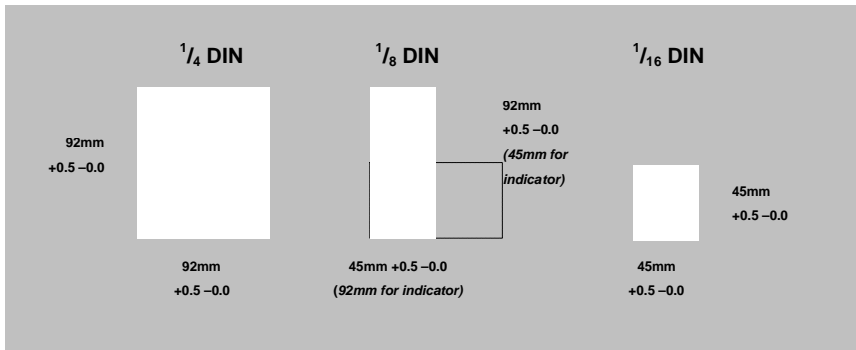


Figure 2 - Panel cut-outs

2.4 Panel-Mounting

CAUTION:

Do not remove the panel gasket, as this may result in inadequate clamping and sealing of the instrument in the panel.

Note:

The mounting clamp tongues may engage the ratchets either on the sides or the top/bottom faces of the Instrument housing. When installing several Instruments side-by-side in one cut-out, use the ratchets on the top/bottom faces.

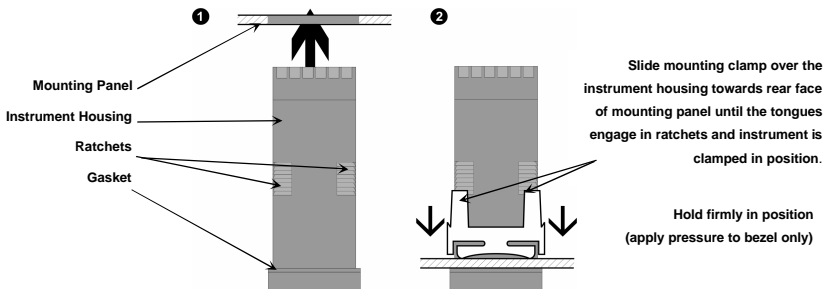


Figure 3 - Panel-Mounting the instrument

CAUTION

Ensure the inside of the panel is with the instruments operating temperature and that there is adequate air flow to prevent overheating.

Once the instrument is installed in its mounting panel, it may be subsequently removed from its housing, if necessary, as described in the Fitting and removing option modules section.

3 Plug-in Options

3.1 Options Modules And Functions

A range of plug-in option modules is available to add additional input, output and communications functions to the instruments in the range. These modules can be either pre-installed at the time of manufacture, or retrofitted in the field.

The modules are installed between the instruments main circuit boards into the four option slots, The slots are designated as slots 1, 2, 3 & A. Installation is detailed below.

Note:

Slot 1 modules cannot be fitted into Slot 2 or 3. Slot 2 & 3 modules cannot be fitted into Slot 1. Some Slot 2 & 3 modules should only be fitted into one of the two slots. This is detailed in Table 1 - Option Module vs. Model Matrix below.

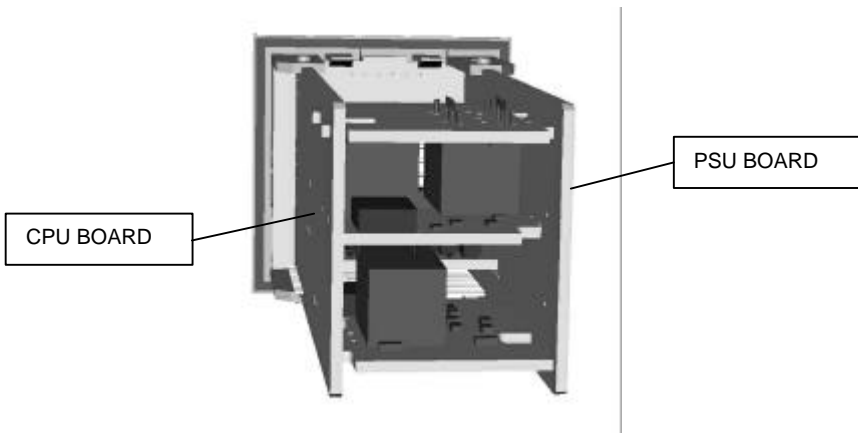


Figure 4 - Typical rear view (uncased) showing PCBs positions

3.2 Auto Detection Of Option Modules

The instrument automatically detects which option modules have been fitted into each slot. In Configuration Mode, the menus will change to reflect the options compatible with the hardware fitted. The modules fitted can be viewed in the Product Information Mode.

Table 1 - Option Module vs. Model Matrix

MODULE PART NUMBER & Function	MODEL NUMBER												
	P1160	P???	P???	P1800	P1820	P1400	P1420	P1161	P1801	P1401	P1166	P???	P1810
OPTION SLOT 1													
PO1-C10 Relay													
PO1-C50 SSR Driver													
PO1-C80 Triac													
PO1-C21 Linear mAV DC													
OPTION SLOT 2													
PO2-C10 Relay													
PO2-C50 SSR Driver													
PO2-C80 Triac													
PO2-C21 Linear mAV DC													
PO2-W09 Dual Relay (OP2 & 4)													
OPTION SLOT 3													
PO2-C10 Relay													
PO2-C50 SSR Driver													
PO2-C21 Linear mAV DC													
PO2-W08 Transmitter PSU													
OPTION SLOT A													
PA1-W06 RS485 Comms													
PA1-W03 Digital Input													
SOFTWARE & ACCESSORIES													
PS2-CON Config Software													
KEY													

3.3 Preparing To Install Or Remove Options Modules

CAUTION

Before removing the instrument from its housing, ensure that all power has been removed from the rear terminals.

1. Remove the instrument from its housing by gripping the side edges of the front panel (there is a finger grip on each edge) and pull the instrument forwards. This will release the instrument from its rear connectors in the housing and will give access to the PCBs.
2. Take note of the orientation of the instrument for subsequent replacement into the housing. The positions of the main and option PCBs in the instrument are shown below.

3.4 Removing/replacing Option Modules

With the instrument removed from its housing:

1. To remove or replace modules into Option Slots 1 or A, it is necessary to gently separate the CPU and PSU PCBs. This is achieved by detaching the main boards (PSU and CPU) from the front moulding by lifting first the upper, and then lower mounting struts as shown. This frees the boards from the front. If only Option slots 2 or 3 are to be changed, this stage is not required as these slots are accessible without separating the main boards from the front.

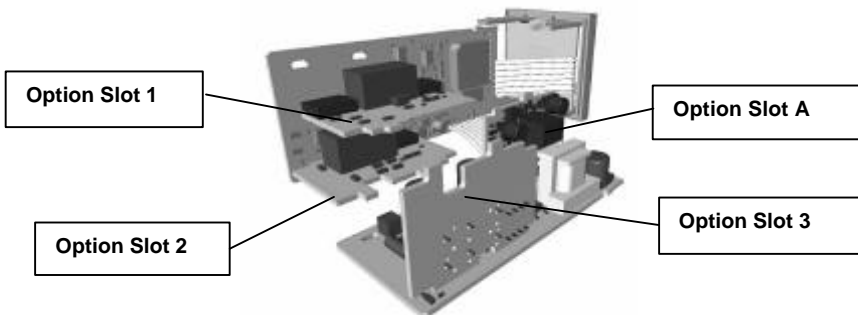


Figure 5 - Location of Option Modules

CAUTION

Take care not to put undue stress on the ribbon cable attaching the display and CPU boards.

2. Remove or fit the modules into the Option slots as required. The location of the connectors is shown below. Tongues on each option module locate into a slots cut into the main boards, opposite each of the connectors.

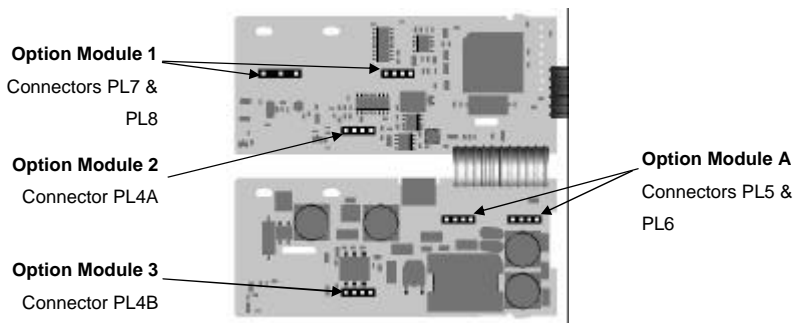


Figure 6 - Option Module Connectors

CAUTION

Check for correct orientation of the modules and that all pins locate correctly into the socket

3.5 Replacing the Instrument in its Housing

With the required option modules correctly located into their respective positions the instrument can be replaced into its housing as follows:

1. If required, move the CPU and PSU boards back together, taking care to locate the option module tongues into the slots in the board opposite. Hold the main boards together whilst relocating them back into the mounting struts on the front panel.
2. Align the CPU and PSU PCBs with their guides and connectors in the housing.
3. Slowly and firmly, push the instrument in position.

CAUTION

Ensure that the instrument is correctly orientated. A mechanical stop will operate if an attempt is made to insert the instrument in the wrong orientation, this stop MUST NOT be over-ridden.

4 Wiring Instructions

Electrical noise is a phenomenon typical of industrial environments. As with any instrumentation, these guidelines should be followed to minimize the effect of noise.

4.1 Installation Considerations

Ignition transformers, arc welders, mechanical contact relays and solenoids are all common sources of electrical noise in an industrial environment and therefore the following guidelines MUST be followed.

1. If the instrument is being installed in existing equipment, the wiring in the area should be checked to ensure that good wiring practices have been followed.
2. Noise-generating devices such as those listed should be mounted in a separate enclosure. If this is not possible, separate them from the instrument, by the largest distance possible.
3. If possible, eliminate mechanical contact relays and replace with solid-state relays. If a mechanical relay being powered by an output of this instrument cannot be replaced, a solid-state relay can be used to isolate the instrument.
4. A separate isolation transformer to feed only instrumentation should be considered. The transformer can isolate the instrument from noise found on the AC power input.

4.2 AC Power Wiring - Neutral (for 100 to 240V AC versions)

It is good practice to ensure that the AC neutral is at or near ground (earth) potential. A proper neutral will help ensure maximum performance from the instrument.

4.3 Wire Isolation

Four voltage levels of input and output wiring may be used with the unit:

1. Analogue input or output (for example thermocouple, RTD, VDC, mVDC or mADC)
2. Relays & Triac outputs
3. SSR Driver outputs
4. AC power

CAUTION

The only wires that should run together are those of the same category.

If any wires need to run parallel with any other lines, maintain a minimum space of 150mm between them.

If wires MUST cross each other, ensure they do so at 90 degrees to minimise interference.

4.4 Use of Shielded Cable

All analogue signals must use shielded cable. This will help eliminate electrical noise induction on the wires. Connection lead length must be kept as short as possible keeping the wires protected by the shielding. The shield should be grounded at one end only. The preferred grounding location is at the sensor, transmitter or transducer.

4.5 Noise Suppression at Source

Usually when good wiring practices are followed, no further noise protection is necessary. Sometimes in severe electrical environments, the amount of noise is so great that it has to be suppressed at source. Many manufacturers of relays, contactors etc supply 'surge suppressors' which mount on the noise source. For those devices that do not have surge suppressors supplied, Resistance-Capacitance (RC) networks and/or Metal Oxide Varistors (MOV) may be added.

Inductive coils - MOVs are recommended for transient suppression in inductive coils, connected in parallel and as close as possible to the coil. Additional protection may be provided by adding an RC network across the MOV.

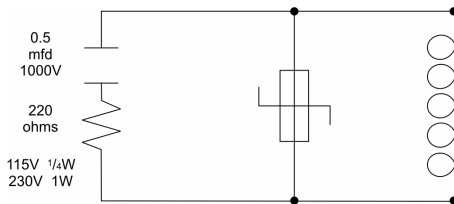


Figure 7 - Transient suppression with inductive coils

Contacts - Arcing may occur across contacts when they contact open and close. This results in electrical noise as well as damage to the contacts. Connecting a properly sized RC network can eliminate this arc.

For circuits up to 3 amps, a combination of a 47 ohm resistor and 0.1 microfarad capacitor (1000 volts) is recommended. For circuits from 3 to 5 amps, connect two of these in parallel.

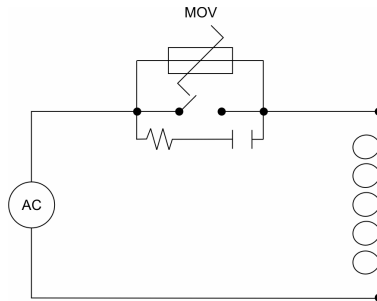


Figure 8 - Contact noise suppression

4.6 Sensor Placement (Thermocouple or RTD)

If the temperature probe is to be subjected to corrosive or abrasive conditions, it must be protected by an appropriate thermowell. The probe must be positioned to reflect true process temperature:

1. In a liquid media - the most agitated area
2. In air - the best circulated area

CAUTION

The placement of probes into pipe work some distance from the heating vessel leads to transport delay, which results in poor control.

For a two wire RTD a wire link should be used in place of the third wire. Two wire RTDs must only be used with lead lengths less than 3 metres. Use of three wire RTDs is strongly recommended.

4.7 Connections and Wiring

The rear terminal connections are illustrated in Figure 9 (1/16 DIN) & Figure 10 (1/4 & 1/8 DIN).

In general, all wiring connections are made to the instrument after it is installed. Copper wires must be used for all connections (except thermocouple signal wires).

WARNING

TO AVOID ELECTRICAL SHOCK. AC POWER WIRING MUST NOT BE CONNECTED TO THE SOURCE DISTRIBUTION PANEL UNTIL ALL WIRING CONNECTIONS PROCEDURES ARE COMPLETED.

WARNING

CHECK THE INFORMATION LABEL ON THE CASE TO DETERMINE THE CORRECT VOLTAGE BEFORE CONNECTING TO A LIVE SUPPLY.

Note:

The wiring diagram below shows all possible combinations. The actual connections required depend upon the features available on the model and the modules and options fitted.

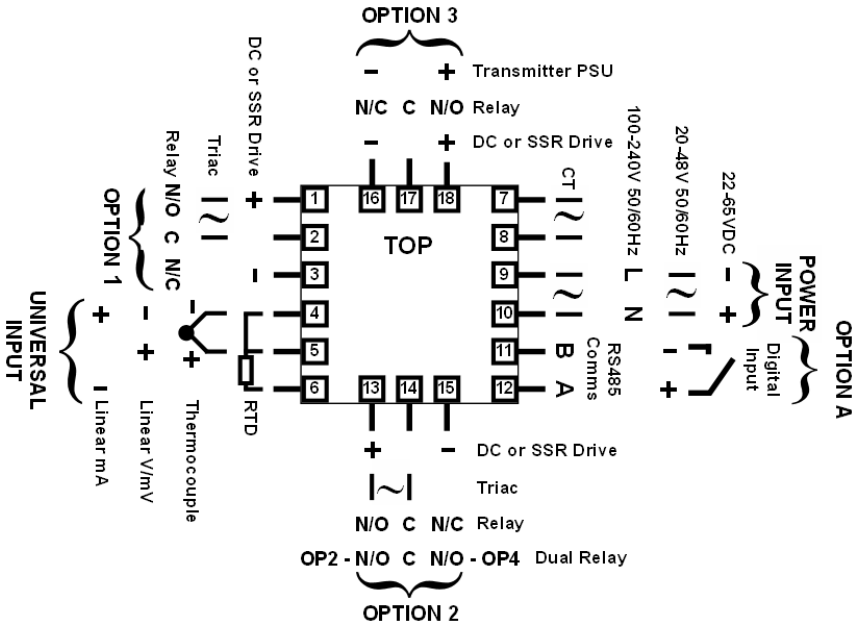


Figure 9 - Rear terminals (¹/₁₆-DIN Instruments)

WARNING

TO AVOID ELECTRICAL SHOCK. AC POWER WIRING MUST NOT BE CONNECTED TO THE SOURCE DISTRIBUTION PANEL UNTIL ALL WIRING CONNECTIONS PROCEDURES ARE COMPLETED.

WARNING

CHECK THE INFORMATION LABEL ON THE CASE TO DETERMINE THE CORRECT VOLTAGE BEFORE CONNECTING TO A LIVE SUPPLY.

Note:

The wiring diagram below shows all possible combinations. The actual connections required depend upon the features available on the model and the modules and options fitted.

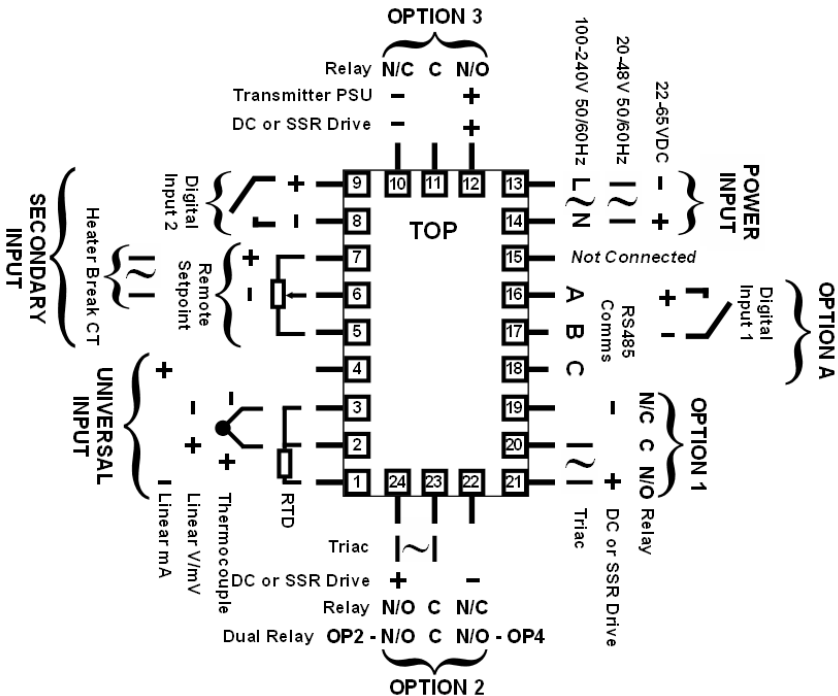


Figure 10 - Rear terminals (1/4-DIN & 1/8-DIN Instruments)

4.8 Power Connections - Mains Powered Instruments

Mains powered instruments operate from a 100 to 240V (+/-10%) 50/60Hz supply. Power consumption is 7.5VA. Connect the line voltage (live and neutral) as illustrated via a two-pole isolating switch (preferably located near the equipment) and a 1amp anti-surge fuse. If the instrument has relay outputs with contacts carrying mains voltage, it is recommended that the relay contacts supply should be switched and fused in a similar manner, but should be separate from the instruments mains supply.

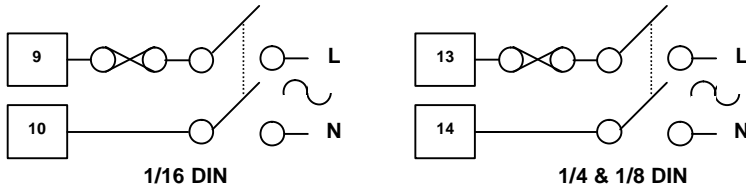


Figure 11 - Mains Power Connections

WARNING

CHECK THE INFORMATION LABEL ON THE CASE TO DETERMINE THE CORRECT VOLTAGE BEFORE CONNECTING TO A LIVE SUPPLY.

CAUTION

This equipment is designed for installation in an enclosure that provides adequate protection against electric shock

4.9 Power Connections - 24/48V AC/DC Powered Instruments

24/48V AD/DC powered instruments operate from a 20 to 48V AC or 22 to 55V DC supply. AC power consumption is 7.5VA max, DC power consumption is 5 watts max. Connect via a two-pole isolating switch (preferably located near the equipment) and a 315mA slow-blow (anti-surge type T) fuse.

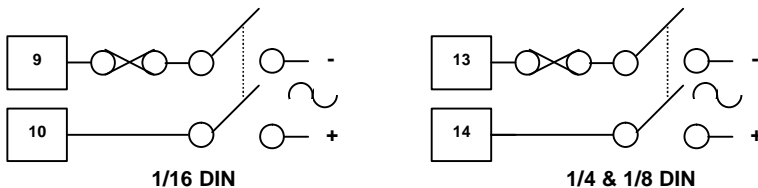


Figure 12 - 24/48V AC/DC Power Connections

WARNING

CHECK THE INFORMATION LABEL ON THE CASE TO DETERMINE THE CORRECT VOLTAGE BEFORE CONNECTING TO A LIVE SUPPLY.

4.10 Universal Input Connections - Thermocouple (T/C)

Use only the correct thermocouple wire or compensating cable from the probe to the instrument terminals avoiding joints in the cable if possible. Failure to use the correct wire type will lead to inaccurate readings. Ensure correct polarity of the wires by cross-referencing the colors with a thermocouple reference table.



Figure 13 - Thermocouple Input Connections

4.11 Universal Input Connections - RTD input

For three wire RTDs, connect the resistive leg and the common legs of the RTD as illustrated. For a two wire RTD a wire link should be used in place of the third wire (shown by dashed line). Two wire RTDs should only be used when the leads are less than 3 metres long. Avoid cable joints.

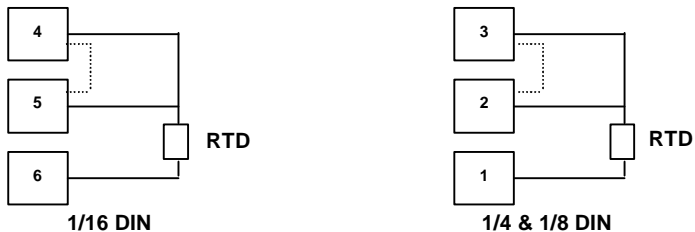


Figure 14 - RTD Input Connections

4.12 Universal Input Connections - Linear Volt, mV or mA input

Linear DC voltage, millivolt or milliamp input connections are made as illustrated. Carefully observe the polarity of the connections.

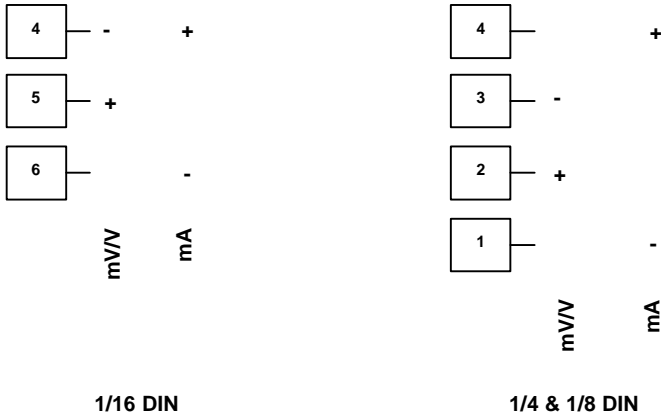


Figure 15 - DC Volt, mV & mA Input Connections

4.13 Secondary Input Connections – Digital Input

If the secondary digital input feature is available, this may be connected to either the voltage free contacts of a switch or relay, or a TTL compatible voltage.

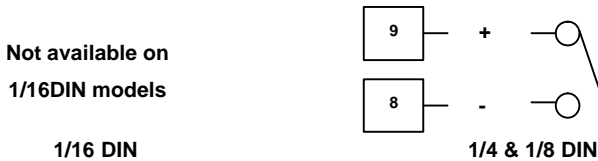


Figure 16 - Secondary Digital Input Connections

4.14 Secondary Input Connections – Heater Current Input

If the heater current measurement feature is available, connections from the secondary winding of the current transformer are as illustrated below.

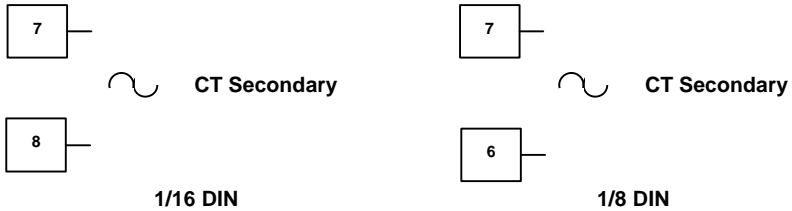


Figure 17 - Heater Current Input Connections

4.15 Secondary Input Connections - Remote Setpoint Input

If the remote setpoint feature is available, input connections are as illustrated below.

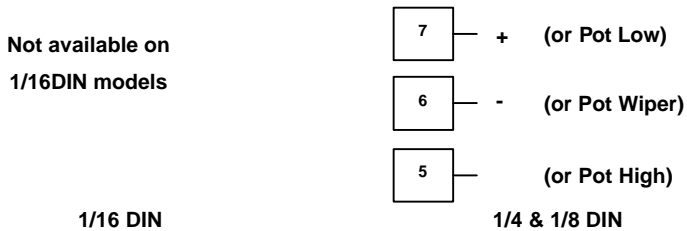


Figure 18 - Remote Setpoint Input Connections

4.16 Option Slot A Connections - RS485 Serial Communications Module

If option slot A is fitted with the RS485 serial communication module connections are as illustrated below. Carefully observe the polarity of the A (Rx/Tx +ve) and B (Rx/Tx -ve) connections.

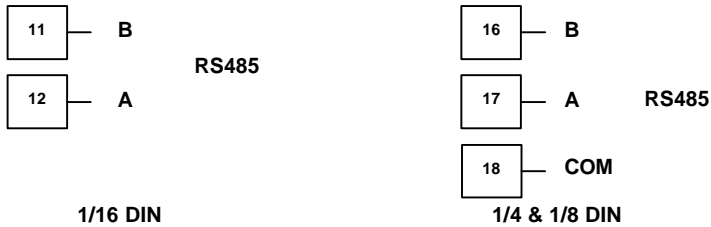


Figure 19 - Option Slot A – RS485 Serial Communications Module

4.17 Option Slot A Connections - Digital Input Module

If option slot A is fitted with a digital input module, this may be connected to either the voltage free contacts of a switch or relay, or a TTL compatible voltage. These connections are illustrated below..

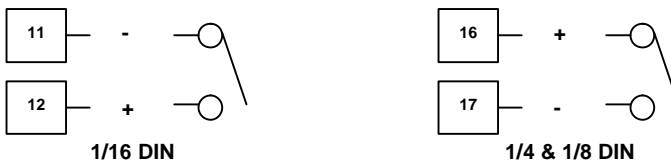


Figure 20 - Option Slot A – Digital Input Module

4.18 Option Slot 1 - Relay Module

If option slot 1 is fitted with a relay output module, make connections as illustrated. The relay contacts are rated at 2 amps resistive, 120/240 VAC.



Figure 21 - Option Slot 1 - Relay Module

4.19 Option Slot 1 - SSR Driver Module

If option slot 1 is fitted with an SSR driver output module, make connections as illustrated. The solid-state relay driver is a 0-10V DC signal, load impedance must be no less than 500 ohms. Not isolated from signal input or other SSR driver outputs.



Figure 22 - Option Slot 1 - SSR Driver Module

4.20 Option Slot 1 - Triac Module

If option slot 1 is fitted with a Triac output module, make connections as illustrated. The triac output is rated at 0.01 to 1 amp @ 240V AC 50/60Hz.



Figure 23 - Option Slot 1 - Triac Module

4.21 Option Slot 1 - Linear Voltage or mADC module

If option slot 1 is fitted with a DC linear output module, make connections as illustrated.



Figure 24 - Option Slot 1 - Linear Voltage or mADC Module

4.22 Option Slot 2 - Relay Module

If option slot 2 is fitted with a relay output module, make connections as. The contacts are rated at 2 amp resistive 120/240 VAC.



Figure 25 - Option Slot 2 - Relay Module

4.23 Option Slot 2 - Dual Relay Module

If option slot 2 is fitted with a dual relay output module, make connections as illustrated. This module has two independent relays, which share a common connection terminal. The contacts are rated at 2 amp resistive 120/240 VAC.

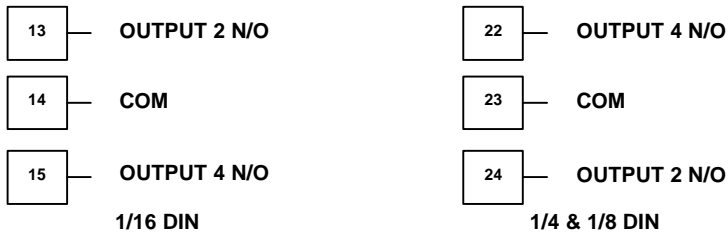


Figure 26 - Option Slot 2 - Dual Relay Module

WARNING

THIS MODULE MUST NOT BE FITTED INTO OPTION SLOT 3.

4.24 Option Slot 2 - SSR Driver Module

If option slot 2 is fitted with an SSR driver output module, make connections as illustrated. The solid-state relay driver is a 0-10V DC signal, load impedance must be no less than 500 ohms. Not isolated from signal input or other SSR driver outputs.



Figure 27 - Option Slot 2 - SSR Driver Module

4.25 Option Slot 2 - Triac Module

If option slot 2 is fitted with a triac output module, make connections as. The triac is rated at 0.01 to 1 amp @ 240V AC 50/60Hz



Figure 28 - Option Slot 2 - Triac Module

WARNING

THIS MODULE MUST NOT BE FITTED INTO OPTION SLOT 3.

4.26 Option Slot 2 - Linear Voltage or mADC module

If option slot 2 is fitted with a DC linear output module, make connections as illustrated.



Figure 29 - Option Slot 2 - Linear Voltage or mADC module

4.27 Option Slot 3 - Relay Module

If option slot 3 is fitted with a relay output module, make connections as illustrated. The contacts are rated at 2 amp resistive 120/240 VAC.



Figure 30 - Option Slot 3 - Relay module

4.28 Option Slot 3 - SSR Driver Module

If option slot 3 is fitted with an SSR driver output module, make connections as illustrated. The solid-state relay driver is a 0-10V DC signal; load impedance must be no less than 500 ohms. Not isolated from signal input or other SSR driver outputs.



Figure 31 - Option Slot 3 - SSR Driver Module

4.29 Option Slot 3 - Linear Voltage or mADC module

If option slot 3 is fitted with a DC linear output module, make connections as illustrated.



Figure 32 - Option Slot 3 - Linear Voltage or mADC module

4.30 Option Slot 3 - Transmitter Power Supply Module

If option slot 3 is fitted with a transmitter power supply module, make connections as illustrated. The output is an unregulated 24V DC, 22mA supply.



Figure 33 - Option Slot 3 - Transmitter Power Supply Module

WARNING

THIS MODULE MUST NOT BE FITTED INTO OPTION SLOT 2.

5 Powering Up

WARNING

ENSURE SAFE WIRING PRACTICES ARE FOLLOWED

The instrument must be powered from a supply according to the wiring label on the side of the unit. Instruments may be either 100 to 240V AC or 24/48V AC/DC powered. Check carefully the supply voltage and connections before applying power.

CAUTION

When powering up for the first time, disconnect the output connections.

5.1 Powering Up Procedure

Once the instrument is powered up, a self-test procedure is automatically started, during which all LED segments and indicators are lit. The instrument returns to operator mode once the self-test procedure is complete.

5.2 Overview Of Front Panel

The illustration below shows a typical instrument front panel. Each model in the range will vary slightly from the example shown. Refer to Table 2 - LED functions for a description of the front panel indicators.

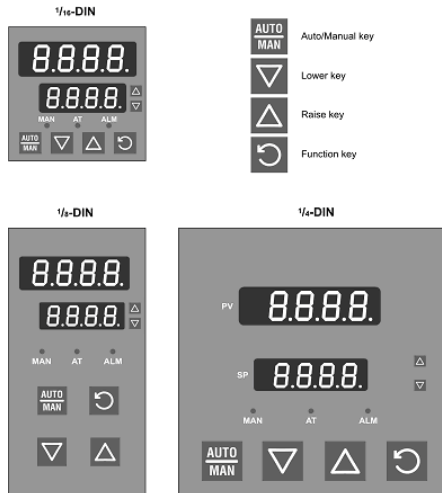









Figure 34 - Typical front panels

5.3 Displays

Indicator models have a single line display, which normally shows the process variable value, and status indicators LED's for mode and alarm indication. Controllers are provided with a dual line display and LED indicators for mode, automatic tune, alarm and output status. The upper display shows the process variable value during normal operation, whilst the lower display shows the setpoint value. See Figure 34 - Typical front panels

5.4 LED Functions

Table 2 - LED functions

LED	Function
	ON indicates the Setup Mode has been entered
	FLASHING indicates the manual mode has been entered
	ON indicates the Self Tune mode has been engaged
	FLASHING indicates the Pre-Tune mode has been engaged
	FLASHING indicates that an alarm condition is present
	ON indicates that controller output power is positive
	ON indicates that controller output power is negative





5.5 Switches

Each instrument in the range has either three or four switches, which are used to navigate through the user menus and make adjustment to the parameter values. See Figure 34 - Typical front panels.

6 Error/Faults Conditions

The following displays are shown when an error or fault has occurred.

Table 3 - Error/Faults conditions

Upper display	Lower Display	Error/Faults Conditions
➤➤➤➤	➤➤➤➤	Configuration & Setup required. Seen at first turn on or if hardware configuration changed. Press  to enter the Configuration Mode, then press  or  to enter the unlock code number, then press  to proceed. Configuration must be completed before return to operator mode is allowed. ¹
➤➤➤➤	Normal Display	Input more than 5% over-range ²
➤➤➤➤	Normal Display	Input more than 5% under-range ³
➤➤➤➤	Normal Display	Sensor Break. Break detected in the input sensor or wiring
➤➤➤➤➤➤	➤➤➤➤➤➤	Option 1 - module faulty.
	➤➤➤➤➤➤	Option 2 - module faulty.
	➤➤➤➤➤➤	Option 3 - module faulty.
	➤➤➤➤	Auxiliary Option – module faulty.

¹ This feature does not guarantee correct configuration but only helps to ensure that the unit will be configured by the user before use. Use of set-up mode is not enforced but may be essential to set the controller up for the users process.

² If the PV display exceeds ➤➤➤➤ before 5% over-range is reached then the over-range indication is given.

³ If the PV display is less than ➤➤➤➤➤➤ before 5% under-range is reached then the under-range indication is given.

7 Instrument Operation Modes

All instruments in the range share a similar user interface. Identical modes are shared by all models within a group of instruments. For more details refer to the table below.



Table 4 - Model Groups

Model Group	Description	Model Group	Description
P1160, P1800 & P1400➤	Controllers	P1401, P1161 &, P1801	Limit Controllers
P6120➤	Controller	P1166	Profile Controller
P6600, P8600➤	Controllers	P6010	Indicator
P1420, P1820➤	Controllers	P1810	Indicator




7.1 Select Mode

This mode is used to gain entry to each of the modes available in the instrument. For more details refer to table 5 - Available modes

7.1.1 Entry into the Select Mode

Hold down  and press  in any mode to force the unit to enter the Select Mode.

7.1.2 Navigating in Select Mode

Once in the Select Mode, press  or  to select the required mode, then press  to enter the selected mode.

To prevent unauthorised entry to Configuration, Setup and Automatic Tuning modes, an unlock code is required. See Table 6 - Lock code values.

Table 5 - Available modes

Mode	Upper Display	Lower Display	Description
Operator Mode	➤➤➤➤	➤➤➤➤	The Default Mode on power up used for normal operation of the instrument.
Set Up Mode	➤➤➤➤	➤➤➤➤	Used to tailor the instrument settings to the application, adjustment of tuning terms etc.
Configuration Mode	➤➤➤➤	➤➤➤➤	Used to configure the instrument for first time use or on re-installation.
Product Information Mode	➤➤➤➤	➤➤➤➤	Used to check the hardware, firmware and manufacturing information of the instrument.
Automatic Tune Mode	➤➤➤➤	➤➤➤➤	Used to invoke the pre-tune and/or self-tune on PID controllers.

Note:

The details of these modes vary depending on the Model Group in question.

7.2 Unlock Codes



The ➤➤➤➤ screen is seen before entry is allowed to Configuration, Setup and Automatic Tuning modes. An unlock code must be correctly selected using the  or  keys. An incorrect entry results in a return to Select Mode.

Table 6 - Lock code values

Lower Display	Upper Display	Description
➤➤➤➤	➤➤	Default values are: Automatic Tune Mode = 0 Set-up mode = 10, Configuration Mode = 20.



Note:

The unlock codes can be changed from within the modes that they apply to.




7.3 Automatic Tune Mode

Automatic Tune Mode is selected when it is desired to use the Pre-tune and Self-tune facilities of the controller to assist the user in setting up Proportional band, Integral and Derivative parameter values. Refer to table 7 - Automatic Tune Mode

Pre-tune can be used to set the Controllers PID parameters approximately. Self-tune may then be used to optimise the tuning. Pre-tune can be set to run automatically after every power-up using the Auto Pre-Tune Apt parameter in Setup Mode.

The **AT** indicator will flash  while pre-tune is operating, and is continuously on  whilst Self-tune is operating. If both Pre-tune and Self-tune are engaged the **AT** indicator will flash until Pre-tune is finished, then turn fully on.

7.3.1 Navigating in Automatic Tune Mode

Press  to select the next parameter in the table and  or  to set the value required.

Hold down  and press  to return to Select Mode.

Table 7 - Automatic Tune Mode

Parameter	Lower Display	Upper Display Adjustment Range	Default	When Visible
Pre-tune	➤➤➤➤➤	On or Off. Indication remains OFF if Pre-Tune cannot be used at this time. This applies if: a). The setpoint is ramping b). The process variable is within 5% of span of the setpoint c). The primary or secondary output proportional bands = 0➤	Off➤	Always
Self-tune	➤➤➤➤➤	On or Off. Indication remains OFF if Self-Tune cannot be used at this time. This applies if the primary output proportional band = 0.	Off➤	Always
Automatic tune mode lock code	➤➤➤➤➤	0 to 9999	➤➤	Always


Note:

If there is no key activity for 2 minutes the controller then returns to the operator mode

7.4 Product Information Mode

This is a read only mode describing the instrument and the options fitted to it.

7.4.1 Navigating in the Product Information Mode

Press  to view each parameter in turn.

Hold Down  and press  to return to Select Mode.

Table 8 - Product description parameters

Parameter	Lower Display	Upper Display	Possible Values	Visible
Input type	➤➤➤➤	➤➤➤➤	Universal input only	Always
Option 1 module type	➤➤➤➤	➤➤➤➤	No option fitted.	Always
		➤➤➤➤	Relay	
		➤➤➤➤	SSR drive	
		➤➤➤➤	Triac	
		➤➤➤➤	Linear voltage / Current output	
Option 2 module type	➤➤➤➤	➤➤➤➤	No option fitted.	Always
		➤➤➤➤	Relay	
		➤➤➤➤	SSR drive	
		➤➤➤➤	Triac	
		➤➤➤➤	Linear voltage / Current output	
Option 3 module type	➤➤➤➤	➤➤➤➤	No option fitted.	Always
		➤➤➤➤	Relay	
		➤➤➤➤	SSR drive	
		➤➤➤➤	Linear voltage / Current output	
		➤➤➤➤	Transmitter power supply	
Auxiliary option module type	➤➤➤➤	➤➤➤➤	No option fitted	Always
		➤➤➤➤	RS485 comms	
		➤➤➤➤	Digital Input	
Firmware	➤➤➤➤	Value displayed is firmware type number		Always
Issue No.	➤➤➤➤	Value displayed is firmware issue number		
Product Rev Level	➤➤➤➤	Value displayed is Product Revision Level.		

Parameter	Lower Display	Upper Display	Possible Values	Visible
Date of manufacture	➤➤Mm➤		Manufacturing date code (mmyy)	
Serial number 1	➤➤➤➤		First four digits of serial number	
Serial number 2	➤➤➤➤		Second four digits of serial number	
Serial number 3	➤➤➤➤		Last four digits of serial number	



Note:

If there is no key activity for 2 minutes the controller then returns to the operator mode

7.5 Lock Code View

In the event that a lock code is forgotten, the instrument lock code values can be seen in the lock code view (read only).

7.5.1 Entry and Navigating in Lock Code View Mode

Press  and  together whilst the instrument is powering up until the ➤➤➤➤ display is shown.

Once in this mode


Press  to step between lock codes.

Table 9 - Lock Codes

Lock Code Name	Upper Display	Lower Display	Description
Configuration Lock Code	➤➤➤➤	Current value	Read only view of Configuration Lock Code.
Setup Lock Code	➤➤➤➤	Current value➤	Read only view of Setup Mode Lock Code.
Automatic Tune Lock-code	➤➤➤➤	Current value➤	Read only view of Automatic Tune Lock Code.

Note:

*If there is no key activity for 2 minutes the instrument, returns to the operator mode.
To forcefully exit this view, switch off the instrument.*

8 P1160, P1800 & P1400 Controller – Model Group

These controllers combine technical functionality, field flexibility and ease of use to give you the best in comprehensive process control. The P1160 ¹/₁₆ –DIN Controller (48 x 48mm), P1800 ¹/₈ –DIN Controller (96 x 48mm) and P1400 ¹/₄ –DIN Controller (96 x 96mm) all offer the same functionality in three DIN sizes.

- | | |
|-----------------------|--------------------------------|
| ? Heat/Cool operation | ? Loop alarm |
| ? Auto/Manual Tuning | ? Dual setpoint selection |
| ? Two process alarms | ? RS485 Modbus and ASCII comms |
| ? Ramping setpoint | ? Configuration via PC |

8.1 P1160, P1800 & P1400 Controllers - Configuration Mode



This mode is normally used only when the instrument is configured for the first time or when a major change is made to the controller characteristics. The Configuration Mode parameters must be set as required before adjusting parameters in Setup Mode, or attempting to use the instrument in an application.

8.1.1 Entry into the Configuration Mode


CAUTION

Personnel competent and authorised to do so must perform adjustments to these parameters.

Configuration is be entered from Select Mode

Hold down  and press  to force the controller into the Select Mode.

then

Press  or  to navigate to the Configuration Mode option, then press 

Note:

Entry into this mode is security-protected by the Configuration Mode Lock Code.

8.1.2 Scrolling Through Parameters and Values

Press to scroll through the parameters (parameters are described below).

Note:

Only parameters that are applicable to the hardware options chosen will be displayed.

8.1.3 Changing the Parameter Value

Press to navigate to the required parameter, then press or to set the value as required.

Once the value is changed, the display will flash to indicate that confirmation of the change is required. The value will revert back if not confirmed within 10 seconds.

Press to accept the change.

Or

Press to reject the change and to move onto the next parameter.

Hold down and press to return to Select Mode.

Note:

If there is no key activity for 2 minutes the instrument returns to the operator mode

Table 10 - P1160, P1800 & P1400 Configuration Mode Parameters

Parameter	Lower Display	Upper Display	Description	Default	When Visible
Input type and Range	▶▶▶▶▶	bC	B type: 100 – 1824 °C	jC for Europe jF for USA	Always
		bF	B type: 211 – 3315 °F		
		CC	C type: 0 – 2320 °C		
		CF	C type: 32 – 4208 °F		
		JC	J type: -200 – 1200 °C		
		JF	J type: -328 – 2192 °F		
		j.C	J type: -128.8 – 537.7 °C with decimal point		
j.F	J type: -199.9 – 999.9 °F with decimal point				

Parameter	Lower Display	Upper Display	Description	Default	When Visible
	▷	KC	K type: -240 – 1373 °C		
		KF	K type: -400 – 2503 °F		
		k.C	K type: -128.8 – 537.7 °C with decimal point		
		K.F	K type: -199.9 – 999.9 °F with decimal point		
		LC	L type: 0 – 762 °C		
		LF	L type: 32 – 1403 °F		
		L.C	L type: 0.0 – 537.7 °C with decimal point		
		L.F	L type: 32.0 – 999.9 °F with decimal point		
		NC	N type: 0 – 1399 °C		
		NF	N type: 32 – 2551 °F		
		rC	R type: 0 – 1759 °C		
		rF	R type: 32 – 3198 °F		
		SC	S type: 0 – 1762 °C		
		SF	S type: 32 – 3204 °F		
		tC	T type: -240 – 400 °C		
		tF	T type: -400 – 752 °F		
		t.C	T type: -128.8 – 400.0 °C with decimal point		
		t.F	T type: -199.9 – 752.0 °F with decimal point		
		P24C	PtRh20% vs PtRh40%: 0 – 1850 °C		
		P24F	PtRh20% vs PtRh40%: 32 – 3362 °F		
		PTC	Pt100: -199 – 800 °C		
		PtF	Pt100: -328 – 1472 °F		
		Pt.C	Pt100: -128.8 – 537.7 °C with decimal point		
		Pt.F	Pt100: -199.9 – 999.9 °F with decimal point		
		➡➡➡➡	0 – 20 mA DC		

Parameter	Lower Display	Upper Display	Description	Default	When Visible
	➤	➤➤➤➤	4 – 20 mA DC		
		➤➤➤➤	0 – 50 mV DC		
		➤➤.➤➤➤	10 – 50 mV DC		
		➤➤➤➤	0 – 5 V DC		
		➤➤➤➤	1 – 5 V DC		
		➤➤➤➤	0 – 10 V DC		
		➤➤➤➤	2 – 10 V DC		
Scale Range Upper Limit	➤➤➤➤	Scale Range Lower Limit +100 to Range Max		1000 Linear or Temp max.	Always
Scale Range Lower Limit	➤➤➤➤	Range Min. to Scale range Upper Limit -100		0 Linear or Temp min.	Always
Decimal point position	➤➤➤➤➤	➤ ➤ ➤ ➤ ➤	Decimal point position in non-temperature ranges. 0 = XXXX 1 = XXX.X 2 = XX.XX 3 = X.XXX	➤➤	➤➤➤➤➤ = mV, V or mA➤
		➤ ➤ ➤ ➤			
		➤ ➤ ➤ ➤			
		➤ ➤ ➤ ➤			
Control Type	➤➤➤➤➤	➤➤➤➤➤ ➤ ➤ ➤ ➤ ➤	Primary (heat) only control ➤	➤➤➤➤➤	Always
		➤➤➤➤➤	Primary and Secondary (heat/cool) control➤		
Primary Output Control Action	➤➤➤➤➤	➤➤➤➤	Reverse Acting	➤➤➤➤	Always
		➤➤➤➤	Direct Acting➤		
Alarm 1Type	➤➤➤➤➤	➤➤➤➤➤	Process High Alarm	➤➤➤➤➤	Always
		➤➤➤➤➤	Process Low Alarm		
		➤➤➤➤	Deviation Alarm		
		➤➤➤➤➤	Band Alarm		
		➤➤➤➤➤	No alarm		
Process High Alarm 1 value*	➤➤➤➤➤	Range Min. to Range Max. <i>Parameter repeated in Setup Mode</i>		Range Max.	➤➤➤➤➤ = ➤➤➤➤➤

Parameter	Lower Display	Upper Display	Description	Default	When Visible
Process Low Alarm 1 value*	➤➤➤➤		Range Min. to Range Max <i>Parameter repeated in Setup Mode</i>	Range Min.	➤➤➤➤ = ➤➤➤➤
Deviation Alarm 1 Value*	➤➤➤➤		+/- span from setpoint <i>Parameter repeated in Setup Mode</i>	➤➤	➤➤➤➤ = ➤➤➤
Band Alarm 1 value*	➤➤➤➤		1 LSD to full span from setpoint. <i>Parameter repeated in Setup Mode</i>	➤➤ ➤	➤➤➤➤ = ➤➤➤➤
Alarm 1 Hysteresis*	➤➤➤➤		1 LSD to 100% of span (in display units) on "safe" side of alarm point. <i>Parameter repeated in Setup Mode</i>	➤➤	Always
Alarm 2 Type	➤➤➤➤		As for alarm 1 type	➤➤➤➤	Always
Process High Alarm 2 value*	➤➤➤➤		Range Min. to Range Max. <i>Parameter repeated in Setup Mode</i>	Range Max.	➤➤➤➤ = ➤➤➤➤
Process Low Alarm 2 value*	➤➤➤➤		Range Min. to Range Max. <i>Parameter repeated in Setup Mode</i>	Range Min.	➤➤➤➤ = ➤➤➤➤
Deviation Alarm 2 Value*	➤➤➤➤		+/- span from setpoint. <i>Parameter repeated in Setup Mode</i>	➤➤	➤➤➤➤ = ➤➤➤
Band Alarm 2 value*	➤➤➤➤		1 LSD to full span from setpoint. <i>Parameter repeated in Setup Mode</i>	➤➤ ➤	➤➤➤➤ = ➤➤➤➤
Alarm 2 Hysteresis*	➤➤➤➤		1 LSD to 100% of span (in display units) on "safe" side of alarm point. <i>Parameter repeated in Setup Mode</i>	➤➤	Always
Loop Alarm Enable	➤➤➤➤		➤➤➤➤ (disabled) or ➤➤➤➤ (enabled)	➤➤➤➤	Always
Loop Alarm Time*	➤➤➤➤		1 sec to 99 mins. 59secs Only applies if primary proportional band = 0	➤➤➤➤➤➤	➤➤➤➤ = ➤➤➤➤
Alarm Inhibit	➤➤➤➤	➤➤➤➤	No alarms Inhibited	➤➤➤➤	Always
		➤➤➤➤	Alarm 1 inhibited		
		➤➤➤➤	Alarm 2 inhibited		
		➤➤➤➤	Alarm 1 and alarm 2 inhibited		

Parameter	Lower Display	Upper Display	Description	Default	When Visible
Output 2 Usage	➤➤➤➤	As for output 1		➤➤ if dual control selected else ➤➤➤	➤➤➤➤ is not➤➤➤➤
Linear Output 2 Range	➤➤➤➤	As for output 1		➤➤➤➤	➤➤➤➤ = ➤➤➤➤
Retransmit Output 2 Scale maximum	➤➤➤➤	➤➤➤➤ ➤➤➤ ➤➤➤➤➤➤	Display value at which output will be maximum➤	Range max	➤➤➤➤ = ➤➤➤➤
Retransmit Output 2 Scale minimum	➤➤➤➤	➤➤➤➤ ➤➤➤ ➤➤➤➤➤➤	Display value at which output will be minimum➤	Range min	➤➤➤➤ = ➤➤➤➤
Output 3 Usage	➤➤➤➤	As for output 1		➤➤➤➤	➤➤➤➤ is not➤➤➤➤
Linear Output 3 Range	➤➤➤➤	As for output 1		➤➤➤➤	➤➤➤➤ = ➤➤➤➤
Retransmit Output 3 Scale maximum	➤➤➤➤	➤➤➤➤ ➤➤➤ ➤➤➤➤➤➤	Display value at which output will be maximum➤	Range max	➤➤➤➤ = ➤➤➤➤
Retransmit Output 3 Scale minimum	➤➤➤➤	➤➤➤➤ ➤➤➤ ➤➤➤➤➤➤	Display value at which output will be minimum➤	Range min	➤➤➤➤ = ➤➤➤➤
Display Strategy	➤➤➤➤	➤➤ ➤➤➤ ➤➤➤ ➤➤➤ or ➤➤➤ (see <i>Operator Mode</i>)		➤➤	Always
Comms Protocol	➤➤➤➤	➤➤➤➤	ASCII	Mm➤➤➤	➤➤➤➤ = ➤➤➤➤
		Mm➤➤➤	Modbus with no parity		
		Mm➤➤➤	Modbus with Even Parity		
		Mm➤➤➤	Modbus with Odd Parity		
Bit rate	➤➤➤➤	➤➤➤➤ ➤	1.2 kbps	➤➤➤➤	➤➤➤➤ = ➤➤➤➤

Parameter	Lower Display	Upper Display	Description	Default	When Visible
	➤	➤➤➤➤	2.4 kbps		➤➤➤➤
		➤➤➤➤	4.8 kbps		
		➤➤➤➤	9.6 kbps		
		➤➤➤➤➤	19.2 kbps		
Communications Address	➤➤➤➤➤	➤➤	Unique address assigned to the instrument in the range of 1 –255 (Modbus), 1-99 (Ascii)	➤➤	➤➤➤➤➤ = ➤➤➤➤➤
Communications Write Enable	➤➤➤➤➤	r_ o read only or r_ Ww read/ write		r_ Ww	Always
Digital Input Usage	➤➤➤➤➤	➤➤➤➤➤	Setpoint 1 / Setpoint 2 Select	➤➤➤➤➤	➤➤➤➤➤ = ➤➤➤➤➤
		➤➤➤➤➤	Automatic / Manual Select		
Configuration Mode Lock Code	➤➤➤➤➤	➤➤ to ➤➤➤➤➤		➤➤➤	Always

Note

*Alarm parameters marked * are repeated in Setup Mode.*

8.2 P1160, P1800 & P1400 – Set Up Mode

This mode is normally selected only after Configuration Mode has been completed, and is used when a change to the process set up is required. It can affect the range of adjustments available in Operator Mode.

Note:


Entry into this mode is security-protected by the Setup Mode lock code.

8.2.1 Entry into the Set Up Mode



Hold down  and press  to enter the Select Mode

Press  or  to navigate to the Setup Mode option, then press  to enter the Set Up Mode.

8.2.2 Scrolling Through Parameters & Values

Press  to scroll through the parameters (refer to the table below) and their values.

8.2.3 Changing the Parameter

Press  to select the required parameter, then press  or  to set the value as required.

Once the displayed value is changed the effect is immediate. No confirmation of the change is required.

Note:

If there is no key activity for two minutes the instrument returns to the operator mode.

Table 11 - P1160, P1800 & P1400 Set Up Mode parameters

Parameter	Lower Display	Upper Display Adjustment Range	Default	When Visible
Input Filter Time constant	➤➤➤➤	OFF, 0.5 to 100.0 secs in 0.5 sec increments	➤➤➤➤	Always
Process Variable Offset	➤➤➤➤	+/- Span of controller	➤➤	Always
Primary (Heat) power	PPWw	The current Primary (heat) output power. Read Only.	N/A	Always
Secondary (Cool) power	SPWw	The current Secondary (Cool) Output power. Read Only.	N/A	➤➤➤➤ = ➤➤➤➤➤➤
Primary Output Proportional Band	➤➤➤➤	0.0% (ON/OFF control) and 0.5% to 999.9% of input span.	➤➤➤➤➤➤	Always

Parameter	Lower Display	Upper Display Adjustment Range	Default	When Visible
Secondary Output Proportional Band	➤➤➤➤	0.0% (ON/OFF control) and 0.5% to 999.9% of input span.	➤➤➤➤	➤➤➤➤ = ➤➤➤➤➤➤
Automatic Reset (Integral Time Constant)	➤➤➤➤➤	1 sec to 99 mins 59 secs and OFF	➤➤➤➤➤	➤➤➤➤➤ is not ➤➤➤➤➤
Rate (Derivative Time Constant)	➤➤➤➤➤ ➤	00 secs to 99 mins 59 secs	➤➤➤➤➤	➤➤➤➤➤ is not ➤➤➤➤➤
Overlap/Deadband	➤➤➤	-20% to +20% of the sum of the Primary and Secondary Proportional Bands	➤➤	➤➤➤➤➤ is not ➤➤➤➤➤
Manual Reset (Bias)	➤➤➤➤➤	0% (-100% If cool output) to 100%	➤➤➤	➤➤➤➤➤ is not ➤➤➤➤➤
Primary Output ON/OFF Differential	➤➤➤➤➤	0.1% to 10.0% of input span (enter in % span)	➤➤➤➤➤	➤➤➤➤ = ➤➤➤➤➤➤
Secondary Output ON/OFF Differential	➤➤➤➤➤	0.1% to 10.0% of input span (enter in % span)	➤➤➤➤➤	➤➤➤➤ = ➤➤➤➤➤➤
Primary and Secondary Output ON/OFF Differential	➤➤➤➤➤	0.1% to 10.0% of input span (enter in % span)	➤➤➤➤➤	➤➤➤➤ and ➤➤➤➤ = ➤➤➤➤
Setpoint Upper Limit	➤➤➤➤➤	Current Setpoint to Range maximum	Range Max.	Always
Setpoint Lower limit	➤➤➤➤➤	Range minimum to Current Setpoint	Range Min	Always
Primary (Heat) Output Upper Power Limit	➤➤➤➤➤	0% to 100% of full power.	➤➤➤➤➤	➤➤➤➤➤ is not ➤➤➤➤➤
Output 1 Cycle Time	➤➤➤➤	0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256 or 512 secs. Not applicable to linear outputs	➤➤➤	➤➤➤➤➤➤ ➤ = ➤➤➤➤➤ or ➤➤➤➤ ➤ or ➤➤➤

Parameter	Lower Display	Upper Display Adjustment Range	Default	When Visible
Output 2 Cycle Time	➤➤➤➤	0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256 or 512 secs. Not applicable to linear outputs	➤➤➤	➤➤➤➤ = ➤➤➤➤ or ➤➤➤➤ ➤ or ➤➤➤
Output 3 Cycle Time	➤➤➤➤	0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256 or 512 secs. Not applicable to linear outputs	➤➤➤	➤➤➤➤ = ➤➤➤➤ or ➤➤➤➤ ➤ or ➤➤➤
Process High Alarm 1 value*	➤➤➤➤➤	Range Min. to Range Max.	Range Max.	➤➤➤➤ = ➤➤➤➤➤
Process Low Alarm 1 value*	➤➤➤➤➤	Range Min. to Range Max.	Range Min.	➤➤➤➤ = ➤➤➤➤➤
Deviation Alarm 1 Value*	➤➤➤➤➤	+/- span from setpoint	➤➤	➤➤➤➤ = ➤➤➤
Band Alarm 1 value*	➤➤➤➤➤	1 LSD to full span from setpoint.	➤➤ ➤	➤➤➤➤ = ➤➤➤➤➤
Alarm 1 Hysteresis*	➤➤➤➤➤	Up to 100% of span	➤➤	Always
Process High Alarm 2 value*	➤➤➤➤➤	Range Min. to Range Max.	Range Max.	➤➤➤➤ = ➤➤➤➤➤
Process Low Alarm 2 value*	➤➤➤➤➤	Range Min. to Range Max.	Range Min.	➤➤➤➤ = ➤➤➤➤➤
Deviation Alarm 2 Value	➤➤➤➤➤	+/- span from setpoint	➤➤	➤➤➤➤ = ➤➤➤
Band Alarm 2 value*	➤➤➤➤➤	1 LSD to full span from setpoint.	➤➤	➤➤➤➤ = ➤➤➤➤➤
Alarm 2 Hysteresis*	➤➤➤➤➤	Up to 100% of span	➤➤	Always
Loop Alarm Time*	➤➤➤➤➤	1 sec to 99 mins. 59secs. Only applies if primary proportional band = 0	➤➤➤➤➤➤	➤➤➤➤ = ➤➤➤➤➤➤
Auto Pre-tune enable / disable	➤➤➤➤	➤➤➤➤➤ disabled or ➤➤➤➤ enabled	➤➤➤➤➤	Always

Parameter	Lower Display	Upper Display Adjustment Range	Default	When Visible
Manual Control select enable / disable	➤➤➤➤	➤➤➤➤ disabled or ➤➤➤➤ enabled	➤➤➤➤	Always
Setpoint ramp shown in operator mode, enable / disable	➤➤➤➤	➤➤➤➤ disabled or ➤➤➤➤ enabled	➤➤➤➤	Always
SP Ramp Rate Value	rP	1 to 9999 units/hour or Off (blank)	<i>Blank</i> ➤	➤➤➤ = ➤➤➤➤➤➤
SP Value	SP	Within scale range upper and lower limits	Range min.	Always
SP1 Value	_ SP1	Within scale range upper and lower limits. “ _ ” indicates currently active SP.	Range min.	Dual Setpoint selected.
SP2 Value	_ SP2	Within scale range upper and lower limits. “ _ ” indicates currently active SP.	Range min.	Dual Setpoint selected.
Set-up Lock Code	➤➤➤➤	0 to 9999	➤➤➤	Always
**First Operator mode displays follows.				

Note:

*Alarm parameters marked * are repeated in Configuration Mode.*

Note:

***Once the complete cycle of Set Up Mode parameters has been displayed, the first Operator Mode display is shown without exiting from Set Up Mode. This is dependant on the Display Strategy and status of Auto/Manual mode selection.*

8.3 P1160, P1800 & P1400 Controllers - Operator Mode

This is the mode used during normal operation of the instrument. It can be entered from Select Mode, and is the usual mode entered at power-up. The available displays are dependent upon whether Dual Setpoint mode is being used, whether Setpoint Ramping is enabled and the setting of the Setpoint Strategy parameter in Configuration Mode.

WARNING

IN NORMAL OPERATION, THE OPERATOR MUST NOT REMOVE THE CONTROLLER FROM ITS HOUSING OR HAVE UNRESTRICTED ACCESS TO THE REAR TERMINALS, AS THIS WOULD PROVIDE POTENTIAL CONTACT WITH HAZARDOUS LIVE PARTS.


CAUTION



Set all Configuration Mode parameters and Set Up Mode parameters as required before starting normal operations.

8.3.1 P1160, P1800 & P1400 Controllers – Extended Operator Mode

It is possible to extend the Operator Mode displays available by adding parameters from Setup Mode, using the PC configuration software. When an extended Operator Mode is configured the additional parameters are available after the standard operator displays.

8.3.2 Navigating in Operator Mode

Press  to move between displays.


When a display value can be adjusted, use  or  to change its value.

Note:

The parameters in this mode are freely available to the operator. The adjustment facilities available in this mode are dependent upon the settings of parameters in the Configuration and Set Up Modes. All parameters in Display strategy 6 are read only, and can only be adjusted via Setup mode.

Table 12 - P1160, P1800 & P1400 Operator mode displays

Upper Display	Lower Display	When Visible	Description
PV Value	Active SP Value	Display strategy 1 and 2. <i>(Initial Screen)</i>	Process Variable and target value of currently selected Setpoint. <i>SP is adjustable in Strategy 2</i>
PV Value	Actual SP Value	Display strategy 3 and 6 <i>(Initial Screen)</i>	Process Variable and actual value of selected Setpoint (e.g. ramping SP value). <i>Read only</i>
PV Value	<i>Blank</i>	Display strategy 4. <i>(Initial Screen)</i>	Shows Process Variable. <i>Read only</i>
Actual SP Value	<i>Blank</i>	Display strategy 5. <i>(Initial Screen)</i>	Shows target value of currently selected Setpoint. <i>Read only</i>
SP Value	SP	Display strategy 1, 3, 4, 5 and 6 if Digital Input is not >>>> in config mode.	Target value of Setpoint. <i>Adjustable except in Strategy 6</i>
SP1 Value	_ SP1	If Digital Input is set for dual SP select (>>>> in config mode).	Target value of Setpoint 1. The _ character is lit if this is the currently selected SP. <i>Adjustable except in Strategy 6</i>
SP2 Value	_ SP2	If Digital Input is set for dual SP select (>>>> in config mode).	Target value of Setpoint 2. The _ character is lit if this is the currently selected SP. <i>Adjustable except in Strategy 6</i>
Actual SP Value	SPrP	If >>>> (ramping SP) is enabled in Setup mode, and ramp rate is on (rP is not <i>Blank</i>).	Actual value of selected Setpoint (e.g. ramping SP value). <i>Read only</i>
SP Ramp Rate Value	rP	If >>>> (ramping SP) is enabled in Setup mode.	Setpoint ramping rate, entered in units per hour. <i>Adjustable except in Strategy 6</i>


Upper Display	Lower Display	When Visible	Description	
Alarm Status	ALM	When any alarm is active. ALM indicator will also flash 	Upper display shows which alarm(s) are active. Inactive alarms are blank	
			1	Alarm 1 Active
			2	Alarm 2 Active
			L	Loop Alarm Active



Note:

When an extended Operator Mode is configured the additional parameters are available after the above parameters.

8.4 Adjusting the Setpoint


The setpoint can be adjusted within the limits set by the Setpoint Upper and Lower Limit parameters in Setup. Operator Mode adjustment of Setpoint is not possible if Display Strategy 6 has been selected on Configuration Mode.



Press  to select the adjustable setpoint display

Press  or  to adjust the setpoint to the required value.

8.5 Adjusting the Setpoint Ramp Rate

The ramp rate may be adjusted in the range 1 to 9999 and OFF. Increasing the ramp rate value beyond 9999 will cause the upper display to go blank and setpoint ramping to be switched OFF. Setpoint ramping can be resumed by decreasing the ramp rate to 9999 or less.

Press  to select the adjustable setpoint display

Press  or  to adjust the setpoint to the required value.

WARNING



THE SETPOINT RAMP FEATURE DISABLES THE PRE-TUNE FACILITY AND THE SELF-TUNE FACILITY WILL COMMENCE ONLY AFTER THE SETPOINT HAS COMPLETED THE RAMP.

8.6 Manual Control Mode

To allow manual control to be selected in Operator Mode, >>>> must be enabled in Set Up Mode. The MAN indicator will flash continually in Manual Mode.

8.6.1 Selecting/deselecting Manual Control Mode

Press the  key to toggle between Automatic and Manual control.

Press  or  to adjust the output power to the required value.

Note:

Disabling >>>> in Set Up Mode whilst manual control mode is active will lock the controller into manual mode. Pressing the Auto/Man key will no longer cause a return to automatic control. To exit from Manual Mode, >>>> must temporarily be re-enabled.

9 Manual Tuning Controllers

9.1 Controllers Fitted With Primary Output Only

Before starting to tune a controller, check that the Setpoint Upper Limit (➤➤➤➤) and Setpoint Lower Limit (➤➤➤➤) are set to safe levels.

The following simple technique may be used to determine values for the Primary Proportional Band (➤➤➤➤), Integral Time Constant (➤➤➤➤) and Derivative Time Constant (➤➤➤➤).

Note:

This technique is suitable only for processes that are not harmed by large fluctuations in the process variable. It provides an acceptable basis from which to start fine-tuning for a wide range of processes.

1. Set the setpoint to the normal operating process value (or to a lower value if overshoot beyond this value is likely to cause damage).
2. Select On-Off control (i.e. set ➤➤➤➤ = 0).
3. Switch on the process. The process variable will oscillate about the setpoint. Note (a) the Peak-to-Peak variation (P) of the first cycle i.e. the difference between the highest value of the first overshoot and the lowest value of the first undershoot, and (b) the time period of this oscillation (T) in minutes. See Figure 35 – Manual Tuning.
4. The PID control parameters should then be set as follows:

$$\text{➤➤➤➤} = \frac{P}{\text{Input Span}} \times 100$$

$$\text{➤➤➤➤} = T \text{ minutes}$$

$$\text{➤➤➤➤} = \frac{T}{6} \text{ ninutes}$$

Note:

After setting up the parameters, return the controller to operator mode to prevent unauthorised adjustment of the values.

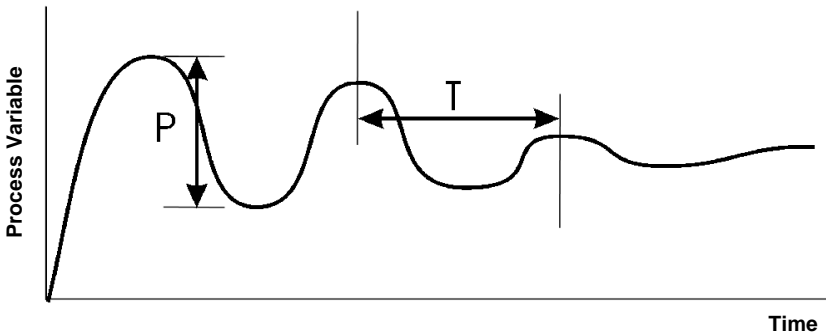


Figure 35 - Manual Tuning

9.2 Controllers Fitted With Primary and Secondary Outputs

Before starting to tune a controller, check that the Setpoint Upper Limit (➤➤➤) and Setpoint Lower Limit (➤➤➤) are set to safe levels.

The following simple technique may be used to determine values for the Primary Proportional Band (➤➤➤), Secondary Proportional Band (➤➤➤), Integral Time Constant (➤➤➤) and Derivative Time Constant (➤➤➤).

Note:

This technique is suitable only for processes that are not harmed by large fluctuations in the process variable. It provides an acceptable basis from which to start fine-tuning for a wide range of processes.

1. Tune the controller using only the Primary Control output as described in the previous section.
2. Set ➤➤➤ to the same value as ➤➤➤ and monitor the operation of the controller in dual output mode. If there is a tendency to oscillate as the control passes into the Secondary Proportional Band, increase the value of ➤➤➤. If the process appears to be over-damped in the region of the Secondary Proportional Band, decrease the value of ➤➤➤.
3. When the PID tuning term values have been determined, if there is a kick to the process variable as control passes from one output to the other, set the Overlap/Deadband parameter to a positive value to introduce some overlap. Adjust this value by trial and error until satisfactory results are obtained.

9.3 Manual Fine Tuning.

A separate cycle time adjustment parameter is provided for with each time proportioning control output.

Note:

Adjusting the cycle time affects the controllers operation; a shorter cycle time gives more accurate control but electromechanical components such relays have a reduced life span.

1. Increase the width of the proportional band if the process overshoots or oscillates excessively.
2. Decrease the width of the proportional band if the process responds slowly or fails to reach setpoint.
3. Increase the automatic reset until the process becomes unstable, then decrease until stability has been restored.

Note:

Allow enough time for the controller and process to adjust.

4. Initially add rate at a value between $1/4^{\text{th}}$ and $1/10^{\text{th}}$ of the automatic reset value.
5. Decrease Rate if the process overshoots/undershoots or oscillates excessively.

Note:

Rate can cause process instability.

6. After making all other adjustments, if an offset exists between the setpoint and the process variable use the Bias (manual reset) to eliminate the error:

Below setpoint - use a positive bias value.

Or

Above setpoint - use a negative bias value.

10 Modbus Serial Communications

All models support the Modbus RTU communication protocol. Some models also support an ASCII communication protocol. Where both Modbus and ASCII are supported, the protocol to be used is selected from Configuration Mode. The RS485 Communications Module must be fitted into Option Slot A in order to use serial communications.

A full description of the parameters available is provided in the Application Layer section.

For a complete description of the Modbus protocol refer to the description provided at <http://www.modicon.com/> or <http://www.modbus.org/>

10.1 Physical Layer

The Base address, bit rate and character format are configured via the front panel in Configuration Mode or by using the PC configurator software.

Physical layer configuration settings possible are:

Data rate: 1200, 2400, 4800 (default), 9600 and 19,200 bps

Parity: None (default), Even, Odd

Character format: Always 8 bits per character.

The transmitter must not start transmission until 3 character times have elapsed since reception of the last character in a message, and must release the transmission line within 3 character times of the last character in a message.

Three character times = 1.5ms at 19200, 3ms at 9600, 6ms at 4800, 12ms at 2400 and 24ms at 1200 bps.

10.2 Link Layer

A Query (or command) is transmitted from the Modbus Master to the Modbus Slave. The instrument assembles the reply to the Modbus Master: All of the instruments covered by this manual are Slave devices, and cannot act as a Modbus Master.

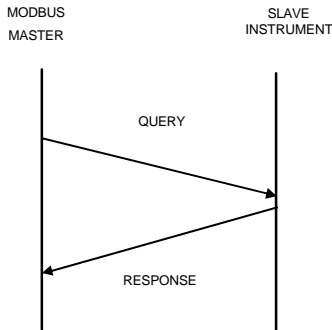


Figure 36 - Link Layer

A message for either a QUERY or RESPONSE is made up of an inter-message gap followed by a sequence of data characters. The inter-message gap is at least 3.5 data character times.

Inter-message gap	Address 1 character	Function 1 character	Data <i>n</i> characters	CRC Check 2 characters
-------------------	------------------------	-------------------------	-----------------------------	---------------------------

Data is encoded for each character as binary data, transmitted lsb first.

For a QUERY the address field contains the address of the slave destination. The slave address is given together with the Function and Data fields by the Application layer. The CRC is generated from the given address, Function and Data characters.

For a RESPONSE the address field contains the address of the responding slave. The Function and Data fields are generated by the Slave Application. The CRC is generated from the address, Function and Data characters.

The standard MODBUS RTU CRC-16 calculation employing the polynomial $2^{16}+2^{15}+2^2+1$ is used.

10.3 Device Addressing

The instrument is assigned a unique device address by the user in the range 1 (default) to 255 using the >>>> parameter in Configuration Mode. This address is used to recognise Modbus Queries intended for this instrument. The instrument does not respond to Modbus Queries that do not match the address that has been assigned to it.

The instrument will also accept global Queries using device address 0 no matter what device address is assigned. No responses are returned for globally addressed Queries.

10.4 Supported Modbus Functions

Modbus defines several function types, the following types are supported by these instruments:

Table 13 – Supported Modbus Functions

Function Code (decimal)	Modbus Meaning	Description
01 / 02	Read Coil/Input Status	Read output/input status bits at given address.
03 / 04	Read Holding/Input registers	Read current binary value of specified number of parameters at given address. Up to 64 parameters can be accessed with one Query.
05	Force single Coil	Writes a single binary bit to the Specified Slave Bit address.
06	Pre-set Single Register	Writes two bytes to a specified word address.
08	Diagnostics	Used for loopback test.
16	Pre-set Multiple Registers	Writes up to 1 word parameter values to the specified address range.

10.5 Function Descriptions

The following is interpreted from the Modbus Protocol Description obtainable from <http://www.modicon.com/> or <http://www.modbus.org/>. Refer to that document if clarification is required.

In the function descriptions below, the preceding device address value is assumed, as is the correctly formed two-byte CRC value at the end of the QUERY and RESPONSE frames.

10.5.1 Read Coil/Input Status (Function 01 / 02)

Reads the content of instruments output/input status bits at the specified bit address.

Table 14 - Read Coil/Input Status (Function 01/02)

QUERY

Function	Address of 1 st Bit		Number of Bits	
	HI	LO	HI	LO
01 / 02				

RESPONSE

Function	Number of Bytes	First 8 bits	2 nd 8 Bits
01 / 02			

In the response the "Number of Bytes" indicates the number of data bytes read from the instrument. E.g. if 16 bits of data are returned then the count will be 2. The maximum number of bits that can be read is 16 in one transaction. The first bit read is returned in the least significant bit of the first 8 bits returned.

10.5.2 Read Holding/Input Registers (Function 03 / 04)

Reads current binary value of data at the specified word addresses.

Table 15 - Read Holding/Input Registers (Function 03/04)

QUERY

Function	Address of 1 st Word		Number of Words	
	HI	LO	HI	LO
03 / 04				

RESPONSE

Function	Number of Bytes	First Word		Last Word	
		HI	LO	HI	LO
03 / 04					

In the response the "Number of Bytes" indicates the number of data bytes read from the instrument. E.g. if 5 words are read then the count will be A(hex). The maximum number of words that can be read is 64. If a parameter does not exist at one of the addresses read, then a value of 0000h shall be returned for that word.

10.5.3 Force Single Coil (Function 05)

Writes a single binary value to the Specified Instrument Bit address.

Table 16 - Force Single Coil (Function 05)

QUERY

Function	Address of Bit		State to write	
	HI	LO	FF/00	00
05	HI	LO	FF/00	00

RESPONSE

Function	Address of Bit		State written	
	HI	LO	FF/00	00
05	HI	LO	FF/00	00

The address specifies the address of the bit to be written to. The State to write is FF when the bit is to be SET and 00 if the bit is to be RESET.

Note that the RESPONSE normally returns the same data as the Query.

10.5.4 Pre-Set Single Register (Function 06)

Writes two bytes to a specified word address.

Table 17 - Pre-Set Single Register (Function 06)

QUERY

Function	Address of Word		Value to write	
	HI	LO	HI	LO
06	HI	LO	HI	LO

RESPONSE

Function	Address of Word		Value written	
	HI	LO	HI	LO
06	HI	LO	HI	LO

Note that the RESPONSE normally returns the same data as the Query.

10.5.5 Loopback Diagnostic Test (Function 08)

Table 18 - Loopback Diagnostic Test (Function 08)

QUERY

Function	Diagnostic Code		Value	
08	HI=00	LO=00	HI	LO

RESPONSE

Function	Sub-function		Value	
08	HI=00	LO=00	HI	LO

The normal Response is an exact echo of the Query.

10.5.6 Pre-Set Multiple Registers (Function 10 Hex)

Writes a consecutive word (two-byte) value to the specified address range.

Table 19 - Pre-Set Multiple Registers (Function 10 Hex)

QUERY

Function	1 st Word Address		Number of Words		Number of Query Bytes		First value to write	
10	HI	LO	HI	LO			HI	LO

RESPONSE

Function	1 st Word Address		Number of Words	
10	HI	LO	HI	LO

The number of consecutive words that can be written is limited to 1.

10.5.7 Exception Responses

When a QUERY is sent that the instrument cannot interpret then an Exception RESPONSE is returned. Possible exception responses are:

Table 20 - Exception Responses

Exception Code	Error Condition	Interpretation
00	Unused	None.
01	Illegal function	Function number out of range.
02	Illegal Data Address	Write functions: Parameter number out of range or not supported. (for write functions only). Read Functions: Start parameter does not exist or end parameter greater than 65536.
03	Illegal Data Value	Attempt to write invalid data / required action not executed.

The format of an exception response is:

RESPONSE

Function	Exception Code
Original Function code with ms bit set.	

In the case of multiple exception codes for a single QUERY the Exception code returned is the one corresponding to the first parameter in error.

11 ASCII Communications

This is a simple ASCII protocol that provides backwards compatibility with previous generations of products. ASCII is not available in all models in the range. The Modbus protocol is recommended for future use.

11.1 Physical Layer

The Base address, bit rate and character format are configured via the front panel in Configuration Mode or by using the PC configurator software.

Physical layer configuration settings possible are:

Data rate: 1200, 2400, 4800 (default), 9600 and 19,200 bps

Parity: Even

Character format: 7 bits per character. + 1 stop bit.

The transmitter must not start transmission until 3 character times have elapsed since reception of the last character in a message, and must release the transmission line within 3 character times of the last character in a message. Three character times = 1.5ms at 19200, 3ms at 9600, 6ms at 4800, 12ms at 2400 and 24ms at 1200 bps.

11.2 Device Addressing

The instrument is assigned a device address by the user using the `➡➡➡➡` parameter in Configuration Mode. The address may be set to any unique value from 1 (default) to 99. This address is used to recognise ASCII messages intended for this instrument. The instrument does not respond to Messages which do not match the address that has been assigned to it.

11.3 Session Layer

The ASCII protocol assumes half duplex communications. The master device initiates all communication. The master sends a command or query to the addressed slave instrument and the slave replies with an acknowledgement of the command or the reply to the query.

Messages from the master device may be one of five types:

Type 1: `{S}{N}??*`

Type 2: `{S}{N}{P}{C}* or R{N}{P}{C}*`

Type 3: `{S}{N}{P}#{DATA}* or R{N}{P}#{DATA}*`

Type 4: `{S}{N}{P}I* or R{N}{P}I*`

Type 5: `{S} {N} \ P S S ? *`

All characters are in ASCII code. See Table 21 below for parameters in brackets { }.

Table 21 - Parameter Key

{S}	is the Start of Message character L (Hex 4C) or R (Hex 52). L is used for Controllers; R is used for Profilers.
{N}	is the slave device address (in the range 1 - 99); addresses 1 - 9 may be represented by a single digit (e.g. 7) or in two-digit form, the first digit being zero (e.g. 07).
{P}	is a character which identifies the parameter to be interrogated/modified.
{C}	is the command (Refer to 13 - Application Layer)
#	indicates that {DATA} is to follow (Hex 23)
{DATA}	is a string of numerical data in ASCII code (refer to table 22)
P	is the Program Number
S S	is the Segment Number (01 to 16)
*	is the End of Message Character (Hex 2A)

No space characters are permitted in messages. Any syntax errors in a received message will cause the slave instrument to issue no reply and await the Start of Message character.

Table 22 - Data Element – Sign/Decimal Point Position

{DATA} Content	Data Format	Description
abcd0	+abcd	Positive value, no decimal place
abcd1	+abc.d	Positive value, one decimal place
abcd2	+ab.cd	Positive value, two decimal places
abcd3	+a.bcd	Positive value, three decimal places
Abcd5	- abcd	Negative value, no decimal place
Abcd6	- abc.d	Negative value, one decimal place
Abcd7	- ab.cd	Negative value, two decimal places
Abcd8	- a.bcd	Negative value, three decimal places

(abcd represents the data value, the last digit indicates data format)

11.3.1 Type 1 Message

L {N} ? ? *

This message is used by the master device to determine whether the addressed slave device is active.

The reply from an active slave is

L {N} ? A *

An inactive device will give no reply.

11.3.2 Type 2 Message

L {N} {P} {C} * or R {N} {P} {C} *

This type of message is used by the master device, to interrogate or modify a parameter in the addressed slave device. {P} identifies the parameter and {C} represents the command to be executed, which may be one of the following:

+ (Hex 2B) -	Increment the value of the parameter defined by {P}
- (Hex 2D) -	Decrement the value of the parameter defined by {P}
? (Hex 3F) -	Determine the current value of the parameter defined by {P}

The reply from the addressed slave device is of the form:

L {N} {P} {DATA} A * or R {N} {P} {DATA} A *

where {DATA} comprises five ASCII-coded digits whose format is shown in Table 22. The data is the value requested in a query message or the new value of the parameter after modification. If the action requested by the message from the master device would result in an invalid value for that parameter (either because the requested new value would be outside the permitted range for that parameter or because the parameter is not modifiable), the slave device replies with a negative acknowledgement:

L {N} {P} {DATA} N * or R {N} {P} {DATA} N *

The {DATA} string in the negative acknowledgement reply will be indeterminate. If the process variable or the deviation is interrogated whilst the process variable is outside the range of the slave device, the reply is:

L {N} {P} < ? ? > 0 A *

if the process variable is over-range, or

L {N} {P} < ? ? > 5 A *

if the process variable is under-range.

11.3.3 Scan Tables

A parameter identifier character “]” in the message from the master device indicates that a “Scan Table” operation is required. The Scan Table provides a facility for interrogating the values of a group of parameters and status in a single message from the master device. The reply to such a command would be in the form:

L {N}] xx aaaaa bbbbb ccccc ddddd eeeee A *

For the Controller Scan Table response, xx is the number of {data} digits to follow; this is 20 for a single control-output instrument and 25 for a dual control-output instrument.

These digits are as described in Tables 23 and 24

Table 23 - Standard scan table

aaaaa	The current setpoint value
bbbbb	The current process variable value
ccccc	The current value of Output 1 Power (0 - 100%)
ddddd	The current value of Output 2 Power (0 - 100%), if applicable.
eeeee	The Controller Status

Table 24 - VMD control mode scan table

aaaaa	The current setpoint value
bbbbb	The current process variable value
ccccc	The current valve movement
ddddd	The Controller Status

11.3.4 Type 3 Message

L {N} {P} # {DATA} * or R {N} {P} # {DATA} *

This message type is used by the master device to set a parameter to the value specified in {DATA}. The command is not implemented immediately by the slave device; the slave will receive this command and will then wait for a Type 4 message (see below). Upon receipt of a Type 3 message, if the {DATA} content and the specified parameter are valid, the slave device reply is of the form:

L {N} {P} {DATA} I * or R {N} {P} {DATA} I *

(where I = Hex 49) indicating that the slave device is ready to implement the command. If the parameter specified is invalid or is not modifiable or if the desired value is outside the permitted range for that parameter, the slave device replies with a negative acknowledgement in the form:

L {N} {P} {DATA} N * or R {N} {P} {DATA} N *

11.3.5 Type 4 Message

L {N} {P} I * or R {N} {P} I *

This type of message is sent by the master device to the addressed slave device following a successful Type 3 transaction with the same slave device. Provided that the {DATA} content and the parameter specified in the preceding Type 3 message are still valid, the slave device will then set the parameter to the desired value and will reply in the form:

L {N} {P} {DATA} A *

where {DATA} is the new value of the parameter. If the new value or parameter specified is invalid, the slave device will reply with a negative acknowledgement in the form:

L {N} {P} {DATA} N *

where {DATA} is indeterminate. If the immediately preceding message received by the slave device was not a Type 3 message, the Type 4 message is ignored.

11.4 Error Response

The circumstances under which a message received from the master device is ignored are:

- Parity error detected
- Syntax error detected
- Timeout elapsed
- Receipt of a Type 4 message without a preceding Type 3 command message.

Negative acknowledgements will be returned if, in spite of the received message being notionally correct, the slave device cannot supply the requested information or perform the requested operation. The {DATA} element of a negative acknowledgement will be indeterminate.

12 Application Layer

12.1 Parameters

The Modbus and ASCII parameters address/indents are detailed below.

12.1.1 Bit Parameters

Bit parameters are not applicable to the ASCII protocol.

Table 25 - Bit Parameters

Parameter	Modbus Par No.	R/W	Notes
Communication Write Status	1	R	1 = Write Enabled, 0 = Write Disabled
Auto / Manual	2	R/W	1 = Manual Control, 0 = Auto Control
Self Tune	3	R/W	1 = Activate(d), 0 = Dis-engage(d)
Pre tune	4	R/W	1 = Activate(d), 0 = Dis-engage(d)
Alarm 1 Status	5	R	1 = Active, 0 = Inactive
Alarm 2 Status	6	R	1 = Active, 0 = Inactive
Setpoint Ramp Enable(d)	7	R/W	Non-VMD modes only. 1 = Enable(d), 0 = Disable(d)
Auto Pre tune	7	R/W	VMD modes only. 1 = Enable(d), 0 = Disable(d)
	8	R/W	Reserved
	9	R/W	Reserved
Loop Alarm Status	10	R/W	1 = Active/Enable, 0 = Inactive/Disable
	11	R/W	Reserved
Loop Alarm	12	R/W	Read to get loop alarm status. Write 0/1 to disable/enable.
Digital Input 2	13	R	State of Option B digital input. (RSP models only).
	14	R	Reserved
	15	R	Reserved

12.1.2 Word Parameters

Table 26 - Word Parameters

Parameter	Modbus Par. No.	ASCII Ident.	R/W	Notes
Process Variable	1	M	R	Current value of PV.
Setpoint	2	S	R/W	Value of currently selected setpoint. (Target setpoint if ramping). Can only be written to if the currently selected setpoint is Setpoint 1 or Setpoint 2.
Output Power	3	W	R/W	0% to 100% for one output; ?100% to +100% for dual output control. Read Only if not in manual control. Not applicable to VMD Output.
Deviation	4	V	R	Value of PV-SP
Secondary Proportional Band	5	U	R/W	Read only if Self-Tuning. Otherwise Read / Write. 0.0% to 999.9% of input span
Primary Proportional Band	6	P	R/W	R/O if Self-Tuning. 0.0% to 999.9% of input span
Direct / Reverse Acting	7		R/W	1 = Direct Acting, 0 = Reverse
Reset (or Loop Alarm Time)	8	I	R/W	Read only if Self-Tuning. Integral Time Constant value or (for ON/OFF control with Loop Alarm Enabled) Loop Alarm Time value ASCII Range: 0secs. to 99mins. 59secs. (99.59) Modbus Range: 0 to 5999
Rate	9	D	R/W	Read only if Self-Tuning. ASCII Range: 0secs. to 99mins. 59secs. (99.59) Modbus Range: 0 to 5999

Parameter	Modbus Par. No.	ASCII Ident.	R/W	Notes
Output 1 Cycle time	10	N	R/W	Non-VMD controller modes only. Powers of 2 in the range 0.5secs. to 512secs. (0.5, 1, 2, 4 etc).
Motor Travel Time	10	N	R/W	VMD controller mode only
Scale Range Lower Limit	11	H	R/W	Lower limit of scaled input range
Scale Range Upper Limit	12	G	R/W	Upper limit of scaled input range
Alarm 1 Value	13	C	R/W	Alarm 1 active at this level
Alarm 2 Value	14	E	R/W	Alarm 2 active at this level
Manual Reset	15	J	R/W	Bias value. 0% to 100% for one output; ?100% to +100% for two outputs Not applicable to VMD Output.
Overlap / Deadband	16	K	R/W	?20% to +20% of PB_P + PB_S; negative = Deadband positive = Overlap Not applicable to VMD Output.
On / Off Differential	17	F	R/W	0.1% to 10.0% of input span Used for Primary output on/off differential and for combined Primary and Secondary on/off differential.
Decimal Point Position	18	Q	R/W	Read only if not Linear Input. 0 = xxxx 1 = xxx.x 2 = xx.xx 3 = x.xxx
Output 2 Cycle Time.	19	O	R/W	Non-VMD controller modes only. Powers of 2 in the range 0.5secs. to 512secs. (0.5, 1, 2, 4 etc).
Minimum On Time	19	O	R/W	VMD only

Parameter	Modbus Par. No.	ASCII Ident.	R/W	Notes
Heat Output Power Limit	20	B	R/W	Safety power limit; 0 – 100 %. Not applicable to VMD.
Actual Setpoint	21		R	Current (ramping) value of selected setpoint.
Setpoint Upper Limit	22	A	R/W	Maximum setpoint value. Current SP to Input Range Maximum
Setpoint Lower Limit	23	T	R/W	Minimum value of setpoint
Setpoint Ramp Rate	24	^	R/W	0 = Off, 1 – 9999 increments / hour. DP position as for input range.
Input Filter Time Constant	25	m	R/W	0 to 100 seconds
Process Value Offset	26	v	R/W	Modified PV = Actual PV + PV Offset. Limited by Scale Range Max. and Scale Range Min.
Re-transmit output Max	27	[R/W	Maximum scale value for retransmit output, 1999 to 9999
Re-transmit Output Min	28	\	R/W	Minimum scale value for retransmit output, 1999 to 9999;
Setpoint 2	29		R/W	Value of Setpoint 2
Remote Setpoint	30		R	Value of RSP. Returns 0FFFFhex if RSP not fitted.
Remote Setpoint Offset	31		R/W	+/- span
Alarm 1 Hysteresis	32		R/W	0 – 100% of span
Alarm 2 Hysteresis	33		R/W	0 – 100% of span
Setpoint 1	34		R/W	Value of Setpoint 1

Parameter	Modbus Par. No.	ASCII Ident.	R/W	Notes	
Setpoint Select	35		R/W	Allows selection of Setpoint 1, Setpoint 2 or RSP (if fitted). A digital input, configured for setpoint selection will take priority over this parameter. 1 = SP1 2 = SP2 100hex = RSP	
Controller commands		Z	R/W	Only Type 3 / 4 ASCII messages are allowed with this parameter. The {DATA} field must be one of eight five-digit numbers. The commands corresponding to the {DATA} field value are: 00010 = Activate Manual Control 00020 = Activate Automatic Control 00030 = Activate the Self-Tune facility 00040 = De-activate the Self-Tune facility 00050 = Request Pre-Tune 00060 = Abort Pre-Tune 00130 = Activate Loop Alarm 00140 = De-activate Loop Alarm	
Controller Status word		L	R	Bit	Meaning
				0	Alarm 1 status. 0 = activated, 1 = safe
				1	Alarm 2 status. 0 = activated, 1 = safe
				2	Self-Tune status. 0 = disabled 1 = activated

Parameter	Modbus Par. No.	ASCII Ident.	R/W	Notes	
				3	Change Indicator. 1 = A parameter other than controller status, PV or Output power has been changed since the last time the status word was read.
				4	Comms write status: 0 = disabled 1 = enabled.
				5	A/M control. 0 = disabled 1 = enabled
				6	Not used.
				7	Pre-tune status. 0 = disabled 1 = enabled.
				8	Loop alarm status. 0 = activated, 1 = safe.
Scan Table]	R	Reads main controller parameters. Refer to Scan Tables	
Equipment ID	122		R	The four digit model number	
Serial number Low	123		R	Bits 0 - 15	Serial numbers are in a numeric range of 0 to 9999 9999 9999. These are stored as 12 BCD digits.
Serial number Mid	124		R	Bits 16 - 31	
Serial number High	125		R	Bits 32 - 47	
Date of manufacture	126		R	Manufacturing date code as an encoded binary number. E.g. 0403 for April 2003 is returned as 193hex	
Hardware configuration (1)	127		R	Refer to table 28	
Hardware configuration (2)	128		R	Refer to table 29	

Parameter	Modbus Par. No.	ASCII Ident.	R/W	Notes
Product Revision Level	129		R	Refer to Product Revision Level
Firmware Version	130		R	Refer to Firmware Version
Input status	133		R	Input status. Read Only. Bit 0: Sensor break flag Bit 1: Under-range flag Bit 2: Over-range flag
Database ID	134		R	Database ID value. This is a unique number to identify the parameter list for this product. It is used by the configurator software to check recipe and database compatibility. A new ID is assigned for each revision of the parameter database for a given product. Database ID values assigned are:
				P1160+ (First release) = 0

Some of the parameters which do not apply to a particular configuration (e.g. Secondary Proportional Band on a single output controller) will accept reads and writes. Others are read only, and will return an exception if an attempt is made to write values to them.

12.2 Communications Parameter Details

This section gives additional information on communications parameters.

12.2.1 Communications Write

Parameters may be read at any time but may be written only if the Communications Write parameter is enabled. A negative acknowledgement (exception code 3) will be sent to write commands if communications writes are not enabled.

12.2.2 Equipment ID

This read only word parameter returns the binary coded four digit model number of the base model of the product. This is a read only parameter.

12.2.3 Date of Manufacture

This word read only parameter returns the date of manufacture. It is encoded as a binary number (e.g. 0403 for April 2003 is returned as 193hex). This is a read only parameter.

12.2.4 Hardware Configuration (1)

This word read only parameter returns the current hardware configuration for each Option Slot as detected by the auto-option detect feature as 4 nibbles of binary data.

Table 27 - Hardware Configuration (1)

Least significant nibble:	Option Slot 1
Nibble 2:	Option Slot 2
Nibble 3:	Option Slot 3
Most significant nibble:	Option Slot A

Values returned in each nibble are:

Option Slot 1,2,3	Value returned
None	0
Single Relay	1
SSR drive	2
Linear	3
Reserved	4
Reserved	5
Reserved	6
Reserved	7
TRIAC	8
Dual Relay	9
24 V Transmitter PSU	10

Option Slot A	Value returned
None	0
RS485	1
Digital input	3

E.g. If option 1 = SSR drive, option 2 = dual relay, option 3 = transmitter supply and option A = RS485 then the value returned is 1623hex.

12.2.5 Hardware Configuration (2)

This read only word parameter returns the current hardware configuration for any further features fitted.

Table 28 - Hardware Configuration (2)

Nibble...	Describes...	Value	Meaning
Least significant nibble:	Build option 1	0	Not fitted.
		1	Heater Break Input fitted.
		2	Remote Setpoint Input fitted.
Nibble 2:	Build option 2	0	Always 0 for models covered by this manual.
Nibble 3:	1/4 DIN Input Build option		
Most significant nibble:	1/4 DIN Output Build option		

12.2.6 Product Revision Level

This word read-only parameter returns the Product revision level code as an encoded binary number. It can only be written by the use of manufacturing diagnostics.

Low byte: Binary number corresponding to Alpha part of PRL. E.g. A = 01hex

High byte: Binary number corresponding to numeric part of PRL. E.g. 13 = 0Dhex

A Product revision level of 13A will be returned as 0D01hex.

12.2.7 Firmware Version

This word read only parameter returns the firmware version number as an encoded binary number.

Table 29 - Firmware Version

Bits	Meaning
0 - 4	Revision number (1,2...)
5 - 9	Alpha version (A=0, B=1...)
10 - 15	Numeric version (starting from 121 = 0)

13 Calibration Mode

WARNING

CALIBRATION IS ONLY REQUIRED FOR INSTRUMENTS IN WHICH CALIBRATION ERRORS HAVE BEEN ENCOUNTERED. REFER TO CALIBRATION CHECK BELOW.

CAUTION

Calibration must be performed by personnel who are technically competent and authorised to do so.

Calibration is carried out during manufacture and is not normally required again during the lifetime of an instrument.

13.1 Equipment Required For Checking or Calibrating the Universal Input

A suitable calibration signal source is required for each input type. To verify the accuracy of the instrument or carry out recalibration, the listed input sources are required, with better than $\pm 0.05\%$ of the reading accuracy:

1. DC linear inputs: 0 to 50mV, 0 to 10VDC and 0 to 20mADC.
2. Thermocouple inputs - complete with 0°C reference facility, appropriate thermocouple functions and compensating leads (or equivalent).
3. RTD inputs: decade resistance box with connections for three-wire input (or equivalent).

13.2 Calibration Check

1. Set the instrument to the required input type.
2. Power up the instrument and connect the correct input leads.
Leave powered up for at least five minutes for RTD and DC linear inputs, or at least 30 minutes for thermocouple inputs.






3. After the appropriate delay for stabilisation has elapsed, check the calibration by connecting the appropriate input source and checking a number of cardinal points.
4. Repeat the test for all required input types.

13.3 Recalibration Procedure




Recalibration is carried out in five phases as shown in the table below, each phase corresponds to an input range of the instrument.

CAUTION

The 50mV phase MUST BE calibrated before the thermocouple range.


Table 30 - Calibration phases	
	50 mV
	10 V
	20 mA
	RTD input (200 ohm)
	Thermocouple (K type source at 0°C required)


To start calibration:

1. Using the correct connections, apply the required calibration input from the source type list above.
2. Whilst the instrument is powering up, press  and  together until  is displayed.

Note:

If a phase has not been previously calibrated the display will flash.

3. Press  to initiate calibration.

4. During calibration the display changes to >>>> for a few seconds.
5. If the input is misconnected or an incorrect signal is applied the calibration will be aborted and the display will shown >>>. The previous calibration value will be retained.
6. If the calibration has succeeded, the pass display is shown >>>> (non-flashing).
7. Press  to step onto the next phase.
8. Repeat this process for each input type until all the phases are calibrated.
9. Switch off the instrument to exit the Calibration Mode.

Note:

An automatic exit is made from Calibration Mode if there is no button activity for five minutes.

14 Appendix 1 - Glossary

Alarm Hysteresis: An adjustable band on the “safe” side of an alarm point, through which the process variable must pass before the alarm will change state, as shown in the diagram below. E.g. a high alarm’s hysteresis band is below the high alarm value, and a low alarm’s hysteresis is above the low alarm value.

Also refer to Alarm Operation.

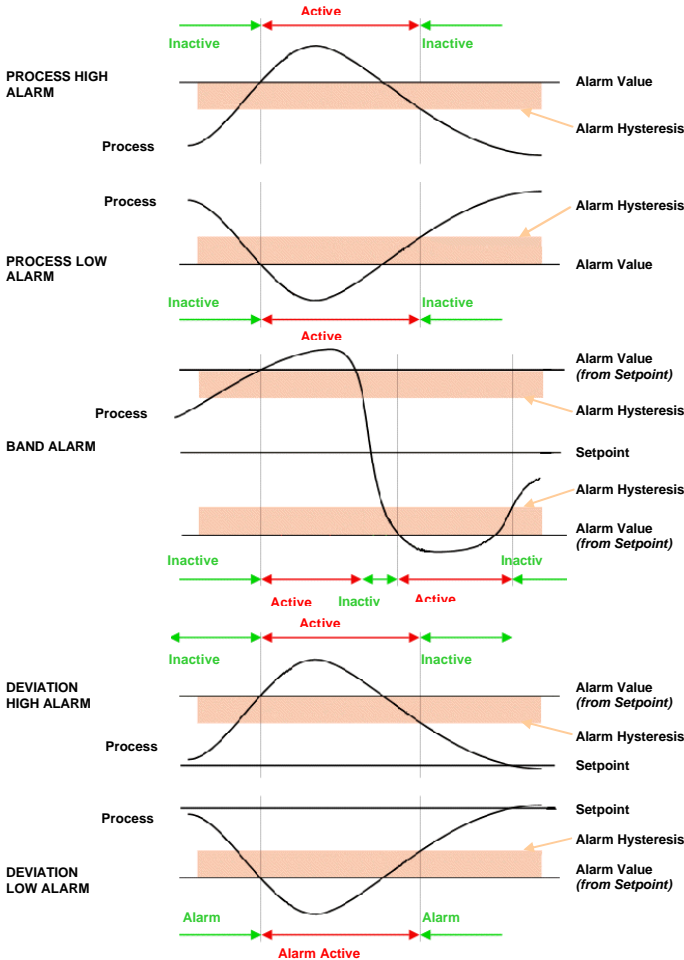


Figure 37 - Alarm Hysteresis Operation

Alarm Operation: The operation of each alarm type is shown below, together with the switching action of an output relay (if this has been configured).
 Also refer to *Alarm Hysteresis, Alarm Inhibit, Band Alarm, Deviation Alarm, Logical Alarm Combinations, Loop Alarm, Process High Alarm and Process Low Alarm.*

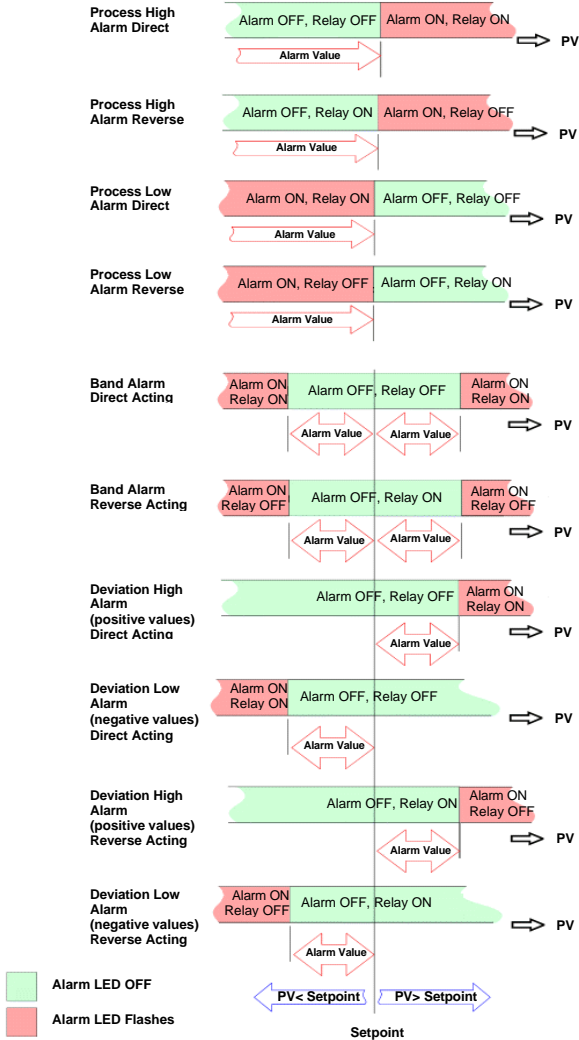


Figure 38 - Alarm Operation

Alarm Inhibit: This inhibits an alarm at power-up, or if a controller Setpoint is switched, until that alarm goes inactive. The alarm operates normally from that point onwards.
Also refer to Alarm Operation.

Automatic Reset (Integral): This is a controller parameter, it is used to automatically bias the proportional output(s) to compensate for process load variations. It is adjustable in the range 1 seconds to 99 minutes 59 seconds per repeat and OFF (value greater than 99 minutes 59 seconds - display shows OFF). Decreasing the time increases the Integral action. This parameter is not available if the primary output is set to On-Off. The default value is five minutes (5.00) and the display code is ArSt.

Also refer to Primary Proportional Band, Secondary Proportional Band, Rate, PID, and Tuning.

Auto Pre-Tune: This is a controller parameter, it determines whether or not the Auto Pre-Tune mode is activated on power up (disa = disabled, enab = enabled). Auto Pre-Tune is useful when the process to be controlled varies significantly each time it is run. Auto Pre-Tune ensures that tuning occurs at the start of the process. Self-Tune may also be engaged to fine tune the controller. Default setting is disabled, display code is Apt.
Also refer to Pre-Tune, Self-Tune and Tuning.

Band Alarm 1 Value: This is a controller parameter, it is applicable only if Alarm 1 is selected to be a Band Alarm, defines a band of process variable values, centred on the setpoint value. If the process variable value is outside this band, the alarm will be active. This parameter may be adjusted from 1 to full span from the setpoint. The default value is 5, the display code is >>>>.
Also refer to Alarm Operation, Band Alarm 2 Value and Input Span.

Band Alarm 2 Value: This is a controller parameter, it is similar to the Band Alarm 1 Value. It is applicable only if Alarm 2 is selected to be a Band Alarm. The default value is 5, the display code is >>>>.
Also refer to Alarm Operation, Band Alarm 1 Value and Input Span.

Bias (Manual Reset): This is a controller parameter, it is expressed as a percentage of output power and is adjustable in the range 0% to 100% (for Primary Output alone) or -100% to +100% (for both Primary and Secondary Outputs). This parameter is not applicable if the Primary output is set to ON/OFF control mode. If the process is below setpoint use a positive Bias value to remove the error, if the process variable is above the setpoint use a negative Bias value. Lower Bias values will also help to reduce overshoot at process start up. The default value is 25%, the display code is >>>>.
Also refer to ON/OFF Control and PID.

Bumpless Transfer: The term "Bumpless Transfer" refers to the method used prevent sudden changes to the output power level when switching between Automatic and Manual control modes. During a transition from Automatic to Manual, the initial Manual Power value will be set to equal the previous automatic mode value. The operator can then adjust the value as required. During a transition from Manual to Automatic, the initial Automatic Power value will be set to equal the previous manual mode value. The correct power level will gradually applied by the control algorithm.
Also refer to Manual Mode.

Communications Write Enable: This parameter enables/disables the changing of parameter values via the RS485 communications link, if the communications option is specified. Settings are read only and read/write. The default setting is r_ Ww (read/write), the display code is >>>>.

CPU: This stands for Central Processing Unit and refers to the onboard microprocessor which controls all of the measuring, alarm and control functions of the instrument.

Current Proportioning Control: Current proportioning control can be implemented on units configured with linear current or voltage output(s). It provides a 4 to 20mA, 0-20mA, 0 to 5V, 0 to 10V or 2 - 10V DC PID output. On-Off control should not be used with Current proportioning control.

Also refer to On-Off Control, PID, Primary Proportional Band, Rate, Secondary Proportional Band and Time Proportioning Control.

Cycle Time: This is a controller parameter. For time proportioning outputs, it is used to define time period over which the average on vs. off time is equal to the required PID output level. >>>, >>>> and >>>>> are available when option slots 1, 2 or 3 are defined as time proportioning output types. The permitted range of value is 0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256 or 512 seconds. Shorter cycle times will give better control, but at the expense of reduce life when used with an electromechanical control device (e.g. Relays or solenoid valves). The default value is 32, and the display codes are >>>, >>>> and >>>>>.

Also refer to PID and Time Proportioning.

Deadband: - Refer to *Overlap/Deadband*.

Derivative: - Refer to *Rate*.

Deviation Alarm 1 Value: This is a controller parameter, it is applicable only if Alarm 1 is selected to be Deviation Alarm. It defines the alarm value either above (positive value = Deviation High) or below (negative value = Deviation Low) the setpoint. If the process variable deviates from the setpoint by a margin greater than this value, alarm 1 becomes active. The default value is 5, the display code is >>>>>.

Also refer to Alarm Operation and Deviation Alarm 2 Value.

Deviation Alarm 2 Value: This controller parameter is applicable only if Alarm 2 is selected as a Deviation Alarm. It is similar to Deviation Alarm 1 Value. The default value is 5, the display code is >>>>> - *Also refer to Alarm Operation and Deviation Alarm 1 Value.*

Differential (On-Off Hysteresis): This is a controller parameter, it is a switching differential used when one or both control outputs have been set to On-Off. This parameter is adjustable within the range 0.1% to 10.0% of input span; the default value is 0.5%. Relay chatter can be eliminated by proper adjustment of this parameter. Too large a value for this parameter will increase amplitude of oscillation in this process variable. The display code is difp for primary only differential, difS for secondary only differential & difF for primary and secondary differential.

Also refer to Input Span and On-Off Control.

Direct/Reverse Operation of Control Outputs: Direct operation is typically used with cooling applications; On-Off direct output(s) will turn on when the process variable exceeds setpoint. Proportional direct output(s) will increase the percentage of output as the process value increases within the proportional band. Reverse operation is typically used with heating applications; On-Off reverse output(s) will turn off when the process variable exceeds setpoint. Proportional reverse output(s) will decrease the percentage of output as the process value increases within the proportional band. The Secondary Output will be direct whenever the Primary Output is selected as reverse. The Secondary Output will be reverse whenever the Primary Output is selected as direct.

Also refer to On-Off Control, PID, Primary Proportional Band and Secondary Proportional Band

Display Strategy: This is a controller parameter; it allows the user to alter the parameters displayed in normal operator mode. These can be PV + SP, PV + adjustable SP, PV + Ramping SP, PV only or SP only. Display strategy 6 will allow read only access to the setpoint values in Operator Mode, Setup Mode must then be entered to change the setpoint.

Also refer to Process Variable, Setpoint and Setpoint Ramping.

Input Filter Time Constant: This parameter is used to filter out extraneous impulses on the process variable. The filtered PV is used for all PV-dependent functions (control, alarm etc). The time constant is adjustable from 0.0 seconds (off) to 100.0 seconds in 0.5 second increments. The default value is 2.0 seconds, the display code is FILt.

Also refer to Process Variable

Input Range: This is the overall input range and type as selected by the >>>> parameter in Configuration Mode.

Also refer to Input Span.

Input Span: This is the allowable measuring limits, as defined by the Scale Range Lower and Scale Range Upper Limits. The trimmed span value is also used as the basis for calculations that relate to the span of the instrument (E.g. a controllers proportional bands)

Also refer to Input Range, Scale Range Lower Limit and Scale Range Upper Limit.

Integral: - Refer to *Automatic Reset*.

LED: Light Emitting Diode. LED's are used as indicator lights (e.g. for the alarm indication). The upper and lower 7-segment displays are also LED's.

Lock Codes: These parameters define the four-digit codes is required to enter Configuration (20), Set-Up (10), and Auto Tuning (0) modes. The default values are shown in brackets, the display codes are cLoc, SLoc and tLoc.

Logical Combination of Alarms: Two alarms may be combined logically to create an AND/OR situation. They may be configured for Reverse-acting or Direct-acting. Any suitable output may be assigned as Logical Alarm Output.

Also refer to Alarm Operation

Table 31 - Logical Alarm Operation

Logical OR Alarm 1 with Alarm 2			
Direct Acting		Reverse-Acting	
AL1 OFF, AL2 OFF:	RELAY OFF	AL1 OFF, AL2 OFF:	RELAY ON
AL1 ON, AL2 OFF:	RELAY ON	AL1 ON, AL2 OFF:	RELAY OFF
AL1 OFF, AL2 ON:	RELAY ON	AL1 OFF, AL2 ON:	RELAY OFF
AL1 ON, AL2 ON:	RELAY ON	AL1 ON, AL2 ON:	RELAY OFF
Logical AND of Alarm 1 with Alarm 2			
Direct-Acting		Reverse-Acting	
AL1 OFF, AL2 OFF:	RELAY OFF	AL1 OFF, AL2 OFF:	RELAY OFF
AL1 ON, AL2 OFF:	RELAY OFF	AL1 ON, AL2 OFF:	RELAY ON
AL1 OFF, AL2 ON:	RELAY OFF	AL1 OFF, AL2 ON:	RELAY OFF
AL1 ON, AL2 ON:	RELAY ON	AL1 ON, AL2 ON:	RELAY OFF

Loop Alarm Enable: This is a controller parameter; it is the means by which the user can enable or disable the loop alarm. The loop alarm is a special alarm which detects faults in the control feedback loop, by continuously monitoring process variable response to the control output(s). The loop alarm can be tied to any suitable output. When enabled, the loop alarm repeatedly checks if the control output(s) are at the maximum or minimum limit. If an output is at the limit, an internal timer is started: thereafter, if the high output has not caused the process variable to be corrected by a predetermined amount 'V' after time 'T' has elapsed, the loop alarm becomes active. Subsequently, the loop alarm mode repeatedly checks the process variable and the control output(s). When the process variable starts to change value in the correct sense or when the output is no longer at the limit, the loop alarm is deactivated.

For PID control, the loop alarm time 'T' is always twice the value of the Automatic Reset parameter. For On-Off control, a user defined value for the Loop Alarm Time parameter is used.

The value of 'V' is dependent upon the input type. For Temperature inputs, V = 2°C or 3°F. For Linear inputs, V = 10 least significant display units

Control output limits are 0% for Single output (Primary only) controllers and -100% for Dual output (Primary and Secondary) controllers.

Correct operation of the loop alarm depends upon reasonably accurate PID tuning. The loop alarm is automatically disabled during manual control mode and during execution of the Pre-Tune mode. Upon exit from manual mode or after completion of the Pre-Tune routine, the loop alarm is automatically re-enabled.

Also refer to Loop Alarm Time, Manual Mode, On-Off Control, Pre-Tune, and Process Variable.

Loop Alarm Time: This is a controller parameter. When On-Off control is selected and loop alarm is enabled, this parameter determines the duration of the limit condition after which the loop alarm will be activated. It may be adjusted within the range of 1 second to 99 minutes 59 seconds. This parameter is omitted from the Set-up mode display sequence if On-Off control is not selected or loop alarm is disabled. The default setting is 99:59 and the display code is Lati.

Also refer to Loop Alarm Enable.

mADC: This stands for milliamp DC. It is used in reference to the DC milliamp input ranges and the linear DC milliamp outputs. Typically these will be 0 to 20mA or 4 to 20mA.

Manual Mode: This is a controller parameter; it determines whether operator selection of manual control is enabled or disabled. If the mode is enabled in Set-Up mode, pressing the AM key in operator mode will cause a controller to enter manual control mode. The upper display will show the current process value, the lower display will show the output power in the form - >xxx. Where xxx is equal to the percentage of output power. The power value may be adjusted using the UP or DOWN keys. The value can be varied in the range 0% of 100% for instruments using primary (heat) only, and -100% to +100% for controllers with primary and secondary (heat & cool). This mode should be used with care because the operator is selecting the power output level, therefore the PID algorithm is not in control of the process. The operator MUST maintain the process as the desired level manually.

Also refer to Bumpless Transfer and PID.

Offset: This parameter is used to modify the measured process variable value and is adjustable in the range \pm input span. Use this parameter only when necessary to compensate for an error in the process variable reading. Positive values are added to the process variable reading, negative values are subtracted. This parameter MUST be used with care, because adjustment of this parameter is in effect, a calibration adjustment. Injudicious application of values to this parameter could lead to the displayed process variable value bearing no meaningful relationship to the actual process variable value. There is no front panel indication of when this parameter is in use. The default value is 0 and the display value is OffS.

Also refer to Input Span and Process Variable.

On-Off Control: This is a controller parameter. When operating in On-Off control, the output(s) will turn on or off as the process variable crosses the setpoint in a manner similar to a central heating thermostat. Some oscillation of the process variable is inevitable when using On-Off control.

On-Off control can be implemented only with Time Proportioning Control (Relay, Triac or SSR driver output), by setting the corresponding proportional band(s) to zero. On-Off operation can be assigned to the Primary (Heat) output alone (secondary output not present), Primary and Secondary (Heat & Cool) outputs or Secondary output only (with the primary Output set for the proportional or current proportional).

Also refer to Differential, PID, Process Variable, Primary Proportional Band, Secondary Proportional Band, Setpoint and Time Proportioning Control.

On-Off Differential (Hysteresis): - Refer to *Differential*.

Overlap/Deadband: This controller parameter defines the portion of the primary and secondary proportional bands (PbP + PbS) over which both outputs are active (Overlap), or neither output is active (Deadband). It is adjustable in the range of -20% to +20% of the two proportional bands added together. Positive values = Overlap, negative values = Deadband. This parameter is not applicable if the primary output is set for On-Off control or if there is no Secondary Output. The display code is OL and the default value is 0%. If the Secondary Output is set for On-Off, this parameter has the effect of moving the Differential band of the Secondary Output to create the overlap or deadband. When Overlap/Deadband = 0, the “OFF” edge of the Secondary Output Differential band coincides with the point at which the Primary Output = 0%.
Also refer to Differential, On-Off Control, Primary Proportional Band and Secondary Proportional Band.

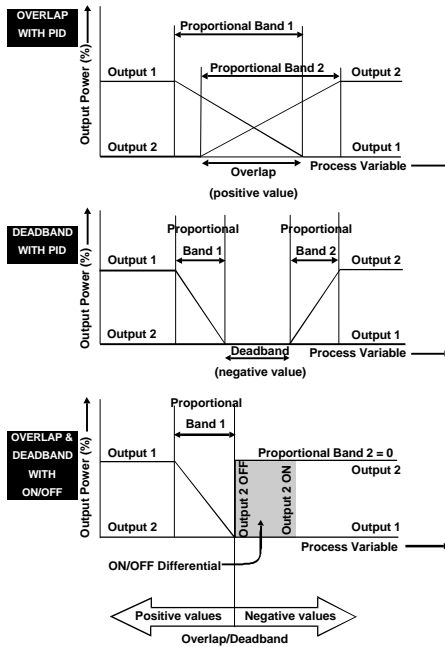


Figure 39 - Overlap and Deadband

PID: This stands for Proportional Integral and Derivative. A control method which accurately maintains the level of a process variable, such as a temperature. It avoids the oscillation characteristic of On-Off control by continuously adjusting the power output level to keep the process variable stable at the desired target setpoint.
Also refer to Automatic Reset, On-Off Control, Primary Proportional Band, Process Variable, Rate, Secondary Proportional Band, Setpoint and Tuning

PLC: This stands for Programmable Logic Controller. A microprocessor based device used in machine control. It is particularly suited to sequential control applications, and uses "Ladder Logic" programming techniques. Some PLC's are capable of basic PID control, but tend to be expensive and often give inferior levels of control. *Also refer to PID.*

Pre-Tune: This is a controller parameter. The Pre-Tune facility artificially disturbs the start-up pattern so that a first approximation of the PID values can be made prior to the setpoint being reached. During Pre-Tune, the controller demands full power until the process value has moved approximately halfway to the setpoint. At that point, power is removed, thereby introducing an oscillation. Once the oscillation peak has passed, the Pre-Tune algorithm calculates an approximation of the optimum PID tuning terms proportional band(s), automatic reset and rate. The process is shown in the diagram below.

When Pre-Tune is completed, the PID control output power is applied using the calculated values. Pre-Tune limits the possibility of setpoint overshoot when the controller is new or the application has been changed. As a single-shot operation, it will automatically disengage once complete, but can be configured to run at every power up using the Auto Pre-Tune function. Pre-Tune will not engage if either primary or secondary outputs on a controller are set for On-Off control, during setpoint ramping or if the process variable is less than 5% of the input span from the setpoint.

Also refer to Auto Pre-Tune, Automatic Reset, On-Off Control, Input Span, PID, Primary Proportional Band, Process Variable, Rate, Secondary Proportional Band, Self-Tune, Setpoint, Setpoint Ramping and Tuning.

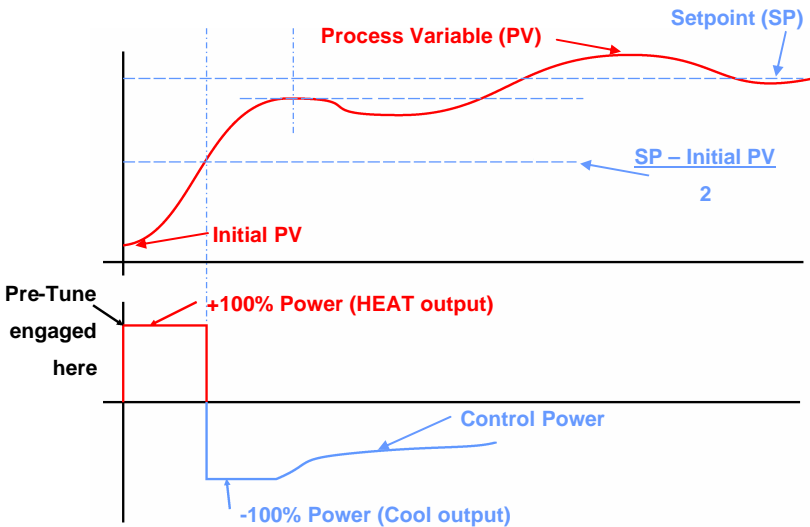


Figure 40 - Pre-Tune Operation

Primary Output Power Limit: This is a controller parameter; it is used to limit the power level of the Primary Output and may be used to protect the process being controlled. It may be adjusted between 0% and 100%. This parameter is not applicable if the primary output is set for On-Off control. The display code is OPhi.
Also refer to On-Off Control.

Primary Proportional Band: This is a controller parameter; it is the portion of the input span over which the Primary (Heat) Output power level is proportional to the process variable value. It may be adjusted in the range 0.0% (ON/OFF) to 999.9%. The default value is 5.0% and the display value is PbP.
Also refer to On-Off Control, Input Span, Overlap/Deadband, PID, Secondary Proportional Band, and Tuning.

Process High Alarm 1 Value: This parameter, applicable only when Alarm 1 is selected to be a Process High alarm, defines the process variable value above which Alarm 1 will be active. Its value may be adjusted between Scale Range Upper Limit and Scale Range Lower Limit. Its default value is Scale Range Upper Limit and the display code is >>>>.
Also refer to Alarm Operation, Process High Alarm 2 Value, Process Variable, Scale Range Lower Limit and Scale Range Upper Limit.

Process High Alarm 2 Value: This parameter, applicable only when Alarm 2 is selected to be a Process High alarm. It is similar to the Process High Alarm 1 Value. Its default value is Scale Range Upper Limit and the display code is >>>>.
Also refer to Alarm Operation, Process High Alarm 1 Value, Process Variable, Scale Range Lower Limit and Scale Range Upper Limit.

Process Low Alarm 1 Value: This parameter, applicable only when Alarm 1 is selected to be a Process low alarm, defines the process variable value below which Alarm 1 will be active. Its value may be adjusted between Scale Range Upper Limit and Scale Range Lower Limit. Its default value is Scale Range Lower Limit and the display code is >>>>.
Also refer to Alarm Operation, Process Low Alarm 2 Value, Process Variable, Scale Range Lower Limit and Scale Range Upper Limit.

Process Low Alarm 2 Value: This parameter, applicable only when Alarm 2 is selected to be a Process low alarm. It is similar to the Process Low Alarm 1 Value. Its default value is Scale Range Lower Limit and the display code is >>>>.
Also refer to Alarm Operation, Process Low Alarm 1 Value, Process Variable, Scale Range Lower Limit and Scale Range Upper Limit.

Process Variable: The Process Variable (PV) is the variable to be measured by the primary input of the instrument. The PV can be any parameter that can be converted into an electronic signal suitable for the input. Common types are Thermocouple or PT100 temperature probes, or pressure, level, flow etc from transducers which convert these parameters into linear DC signals (e.g. 4 to 20mA). Linear signals can be scaled into engineering units using the Scale Range Lower Limit and Scale Range Upper Limit parameters.
Also refer to Input Span, Scale Range Lower Limit and Scale Range Upper Limit.

Process Variable Offset: - Refer to *Offset*.

Rate (Derivative): This is a controller parameter; it is adjustable in the range 0 seconds to 99 minutes 59 seconds and specifies how the control action responds to the rate of change in the process variable. This parameter should NOT be used in modulating valve applications as it can cause premature wear due to constant small adjustments to the valve position. The Rate parameter is not available if primary control output is set to On-Off. The default value is 0.0 and the display code is rAtE.

Also refer to On-Off Control, PID, Process Variable and Tuning.

Retransmit Output: This can be used to transmit a linear DC voltage or mA signal proportional to the Process Variable or Setpoint to a device, such as a Data Recorder or PLC. The output can be scaled to transmit any portion of the input or setpoint span.

Also refer to Input Span, Process Variable and Setpoint.

Retransmit Output 1 Scale Maximum: This parameter can be used with a linear output module in slot 1 to retransmit an analogue signal proportional to either the process variable or controller setpoint values to other devices. The retransmit Scale Maximum defines the value of the process variable or setpoint at which the output will be at its maximum value. E.g. for a 0 to 5V output, the value corresponds to 5V. It may be adjusted within the range -1999 to 9999; the decimal position is always the same as that for the process variable input. If this parameter is set to a value less than that for Retransmit Output 1 Scale Minimum, the relationship between the process variable/setpoint value and the retransmission output is reversed. The default value is Scale Range Upper Limit and the display code is ro1H.

Also refer to Process Variable, Retransmit Output, Retransmit Output 1 Scale Minimum, Scale Range Upper Limit and Setpoint.

Retransmit Output 1 Scale Minimum: This parameter can be used with a linear output module in slot 1 to retransmit an analogue signal proportional to either the process variable or controller setpoint values to other devices. The retransmit Scale Minimum defines the value of the process variable or setpoint at which the output will be at its minimum value. E.g. for a 0 to 5V output, the value corresponds to 0V. It may be adjusted within the range -1999 to 9999; the decimal position is always the same as that for the process variable input. If this parameter is set to a value greater than that for Retransmit Output Scale Maximum, the relationship between the process variable/setpoint value and the retransmission output is reversed. The default value is Scale Range Lower Limit and the display code is ro1L.

Also refer to Process Variable, Retransmit Output, Retransmit Output 1 Scale Maximum, Scale Range Lower Limit and Setpoint.

Retransmit Output 2 Scale Maximum: This parameter defines the maximum value of the retransmission from output 2, of the process variable or setpoint if either has been selected. It is similar to Retransmit Output 1 Scale Maximum. The default value is Scale Range Upper Limit and the display code is ro2H.

Also refer to Process Variable, Retransmit Output, Retransmit Output 2 Scale Minimum, Scale Range Upper Limit and Setpoint.

Retransmit Output 2 Scale Minimum: This parameter defines the minimum value of the retransmission from output 2, of the process variable or setpoint if either has been selected. It is similar to Retransmit Output 1 Scale Minimum. The default value is Scale Range Lower Limit and the display code is ro2L.

Also refer to Process Variable, Retransmit Output, Retransmit Output 2 Scale Maximum, Scale Range Lower Limit and Setpoint.

Retransmit Output 3 Scale Maximum: This parameter defines the maximum value of the retransmission from output 3, of the process variable or setpoint if either has been selected. It is similar to Retransmit Output 1 Scale Maximum. The default value is Scale Range Upper Limit and the display code is ro3H.

Also refer to Process Variable, Retransmit Output, Retransmit Output 3 Scale Minimum, Scale Range Upper Limit and Setpoint.

Retransmit Output 3 Scale Minimum: This parameter defines the minimum value of the retransmission from output 3, of the process variable or setpoint if either has been selected. It is similar to Retransmit Output 1 Scale Minimum. The default value is Scale Range Lower Limit and the display code is ro3L.

Also refer to Process Variable, Retransmit Output, Retransmit Output 3 Scale Maximum, Scale Range Lower Limit and Setpoint.

Reset: - Refer to *Automatic Reset*.

Scale Range Upper Limit: For a linear input, this parameter can be used to display the process variable in engineering units. It defines the displayed value when the process variable input is at its maximum value. It is adjustable between -1999 to 9999 and can be set to a value less than (but not within 100 units of) the Scale Range Lower Limit, in which case the sense of the input is reversed.

For thermocouple and RTD inputs, this parameter is used to reduce the effective range of the input. All span related functions, work from the trimmed input span. The parameter can be adjusted within the limits of the range selected by Configuration Mode parameter >>>>. It is adjustable to within 100 degrees of the Scale Range Lower Limit. The default value is 1000 for linear input or range maximum for temperature inputs. The display code is rUL. *Also refer to Input Span, Process Variable and Scale Range Lower Limit.*

Scale Range Lower Limit: For a linear input, this parameter can be used to display the process variable in engineering units. It defines the displayed value when the process variable input is at its minimum value. It is adjustable between -1999 to 9999 and can be set to a value more than (but not within 100 units of) the Scale Range Upper Limit, in which case the sense of the input is reversed.

For thermocouple and RTD inputs, this parameter is used to reduce the effective range of the input. All span related functions, work from the trimmed span. The parameter can be adjusted within the limits of the range selected by Configuration Mode parameter >>>>. It is adjustable to within 100 degrees of the Scale Range Upper Limit. The default value is 0 for linear inputs, or range minimum for temperature inputs. The display code is rUL. *Also refer to Input Span, Process Variable and Scale Range Upper Limit.*

Secondary Proportional Band: This is a controller parameter; it is the portion of the input span over which the Secondary 'Cool' Output power level is proportional to the process variable value. It may be adjusted in the range 0.0% (ON/OFF) to 999.9%. The default value is 5.0% and the display value is PbS.

Also refer to On-Off Control, Input Span, Overlap/Deadband, PID, Primary Proportional Band and Tuning.

Self-Tune: The self-tune is used to optimise tuning while a controller is operating; it uses a pattern recognition algorithm, which monitors the process error (deviation signal). The diagram below shows a typical temperature application involving a process start up, setpoint change and load disturbance.

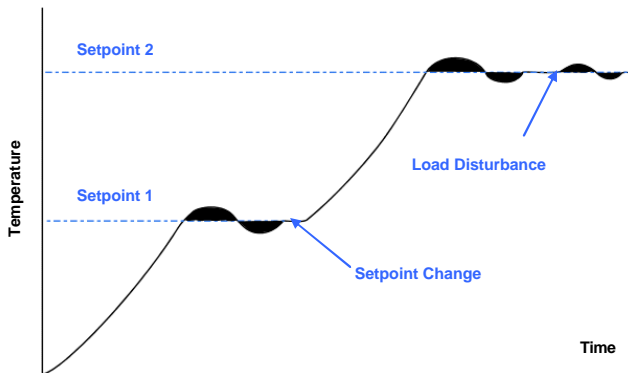


Figure 41 - Self-Tune Operation

The deviation signal is shown shaded and overshoots have been exaggerated for clarity. The Self-Tune algorithm observes one complete deviation oscillation before calculating a set of PID values. Successive deviation oscillation causes values to be recalculated so that the controller rapidly converges on optimal control. When the controller is switched off, the final PID terms remain stored in the controller's non-volatile memory, and are used as starting values at the next switch on. The stored values may not always be valid, if for instance the controller is brand new or the application has been changed. In these cases the user can utilise Pre-Tune.

Use of continuous self-tune is not always appropriate for applications which are frequently subjected to artificial load disturbances, for example where an oven door is likely to be frequently left open for extended periods of time. Self-Tune cannot be engaged if a controller is set for On-Off Control.

Also refer to On-Off Control, Pre-Tune, PID, and Tuning.

Setpoint: This is a controller parameter; it is the target value at which the controller will attempt to maintain the process variable, by making adjustments to the power output level. Controllers can have either one or two setpoints, (one of which can be selected to be the active setpoint according to the status of a digital input or via serial communications). Controllers may have two local (internal) setpoints (SP1 and SP2) whilst some models can have one local (internal) and one externally adjusted remote setpoint. Models with remote setpoint (RSP) have input terminals for a digital input and a linear DC Voltage, mA or potentiometer input to adjust the RSP value. The range of adjustment is between Setpoint Upper Limit and Setpoint Lower Limit. The default value is Scale Range Lower Limit and the display code is SP, SP1, SP2, LSP or RSP

Also refer to Process Variable, Scale Range Lower Limit, Setpoint Lower Limit and Setpoint Upper Limit.

Setpoint Upper Limit: This is a controller parameter; it is the maximum limit for setpoint adjustment. It should be set to keep the setpoint below a value that might cause damage to the process. The range of adjustment is between Scale Range Upper Limit and Scale Range Lower Limit. The value cannot be moved beyond the current value of the setpoint. The default value is Scale Range Upper Limit and the display code is SPuL.

Also refer to Scale Range Lower Limit, Scale Range Upper Limit, Setpoint and Setpoint Lower Limit.

Setpoint Lower Limit: This is a controller parameter; it is the minimum limit for setpoint adjustment. It should be set to keep the setpoint above a value that might cause damage to the process. The range of adjustment is between Scale Range Lower Limit and Scale Range Upper Limit. The value cannot be moved beyond the current value of the setpoint. The default value is Scale Range Lower Limit and the display code is SPL.

Also refer to Scale Range Lower Limit, Scale Range Upper Limit, Setpoint and Setpoint Upper Limit.

Setpoint Ramping: This is a controller parameter; it enables and disables viewing of the Setpoint Ramp Rate in operator mode. It does not disable the Setpoint Ramping feature itself. To do this, set the Setpoint Ramp Rate to off.

The default setting is Disabled and the display code is SPR.

Also refer to Process Variable, Setpoint and Setpoint Ramp Rate.

Setpoint Ramp Rate: This is a controller parameter. It can be used to protect the process from rapid changes in the setpoint. When a setpoint ramp rate is set, it limits the rate at which the actual setpoint value can move towards the target value, when the setpoint value is adjusted or the active setpoint is changed. Also, at power up, the initial value of the actual setpoint will be equal to the current process variable value. The actual setpoint will rise/fall at the ramp rate set until it reaches the target setpoint value.

The default setting is OFF and the display code is rP.

Also refer to Setpoint and Setpoint Ramp Rate.

SSR: Solid State Relay. An external device manufactured using two silicone controlled rectifiers, which can be used to replace mechanical relays (when switching AC power only) in most applications. As a solid state device, an SSR does not suffer from contact degradation when switching electrical current. Much faster switching cycle times are also possible, leading to superior control. The instrument's SSR Driver output is a time proportioned 10VDC which, causes conduction of current to the load when this driver voltage is turned on.

Also refer to Cycle Time, Time Proportioning Control, Triac.

Time Proportioning Control: Time proportioning control is accomplished by cycling the output on and off during a prescribed cycle time, whenever the process variable is within the proportional band. The control algorithm determines the ratio of time 9 (on vs. off) to achieve the level of output power required to correct any error between the process value and setpoint. E.g. for a 32 second cycle time, 25% power would result in the output turning on for 8 seconds, then off to 24 seconds. Time proportioning control can be implemented with Relay, Triac or SSR Driver outputs for either primary (Heat) or secondary (Cool) outputs depending on hardware configuration.

Also refer to Current Proportioning Control, Cycle Time, PID, Primary Proportional Band, Process Variable, Secondary Proportional Band, Setpoint, SSR and Triac.

Tuning: PID Controllers must be tuned to the process in order for them to attain the optimum level of control. Adjustment is made to the tuning terms either manually, or by utilising the controller's automatic tuning facilities. Tuning is not required if the controller is configured for On-Off Control.

Also refer to Automatic Reset, Auto Pre-Tune, On-Off control, PID, Pre-Tune, Primary Proportional Band, Rate, Self-Tune and Secondary Proportional Band.

Triac: A small internal solid state device, which can be used in place of a mechanical relay in applications switching low power AC, up to 1 amp. Like a relay, the output is time proportioned, but much faster switching cycle times are also possible, leading to superior control. As a solid state device, a Triac does not suffer from contact degradation when switching electrical currents. A triac cannot be used to switch DC power.

Also refer to Cycle Time, SSR, Time Proportioning Control.

15 Appendix 2- Specification

15.1 Universal Input

15.1.1 General Input Specifications

Input Sample Rate:	Four samples/second.	
Digital Input Filter time constant	0.0 (OFF), 0.5 to 100.0 seconds in 0.5 second increments.	
Input Resolution:	14 bits approximately. Always four times better than display resolution.	
Input Impedance:	10V DC:	47K?
	20 mA DC:	5?
	Other ranges:	Greater than 10M? resistive
Isolation:	Universal input isolated from all outputs (except SSR drive) at 240V AC.	
Process Variable Offset:	Adjustable ?input span.	
Process Variable Display:	Displays up to 5% over and 5% under span.	

15.1.2 Thermocouple

Thermocouple Ranges Available

Sensor Type	Range Min ?C	Range Max ?C	Range Min ?F	Range Max ?F	Resolution
J (default ⁴)	-200	1200	-328	2192	1
J	-128.8	537.7	-199.9	999.9	0.1
T	-240	400	-400	752	1
T	-128.8	400.0	-199.9	752.0	0.1
K	-240	1373	-400	2503	1
K	-128.8	537.7	-199.9	999.9	0.1
L	0	762	32	1403	1

⁴ Defaults to Degrees F for USA. Defaults to Degrees C for non- USA units.

Sensor Type	Range Min $^{\circ}$ C	Range Max $^{\circ}$ C	Range Min $^{\circ}$ F	Range Max $^{\circ}$ F	Resolution
L	0.0	537.7	32.0	999.9	0.1
N	0	1399	32	2551	1
B	100	1824	211	3315	1
R	0	1759	32	3198	1
S	0	1762	32	3204	1
C	0	2320	32	4208	1
PtRh20%: PtRh40%	0	1850	32	3362	1

Note:

The Configuration Mode parameters, Scale Range Upper Limit and Scale Range Lower Limit, can be used to restrict range.

Thermocouple Performance

Calibration:	Complies with BS4937, NBS125 and IEC584.
Sensor Break Protection:	Break detect approx two seconds. Control outputs turn OFF (0% power); Alarms operate as if the process variable is over-range.
Measurement Accuracy:	$\pm 0.1\%$ of full range span ± 1 LSD. NOTE: Reduced performance with Type "B" Thermocouple between 100 - 600 $^{\circ}$ C (212 - 1112 $^{\circ}$ F). NOTE: PtRh 20% vs PtRh 40% Thermocouple accuracy is 0.25% and reduced performance below 800 $^{\circ}$ C.
Linearisation Accuracy:	Better than $\pm 0.2^{\circ}$ C any point, any 0.1 $^{\circ}$ C range ($\pm 0.05^{\circ}$ C typical). Better than $\pm 0.5^{\circ}$ C any point, any 1 $^{\circ}$ C range.
Cold Junction Compensation:	Better than $\pm 0.7^{\circ}$ C under reference conditions. Better than $\pm 1^{\circ}$ C under operating conditions.
Temperature Stability:	0.01% of span/ $^{\circ}$ C change in ambient temperature.
Supply Voltage Influence:	Negligible.
Relative Humidity Influence:	Negligible.
Sensor Resistance Influence:	Thermocouple 100 Ω : $<0.1\%$ of span error. Thermocouple 1000 Ω : $<0.5\%$ of span error.

15.1.3 Resistance Temperature Detector (RTD)

RTD Ranges Available

Range Min /?C	Range Max /?C	Range Min /?F	Range Max /?F	Resolution
-128.8	537.7	-199.9	999.9	0.1
-199	800	-328	1472	1 (default)

Note:

Scale Range Upper Limit and Scale Range Lower Limit Configuration Mode parameters can be used to restrict range

RTD Performance

Type and Connection:	Three-wire Pt100.
Calibration:	Complies with BS1904 and DIN43760.
Lead Compensation:	Automatic scheme.
RTD Sensor Current:	150? A (approximately).
Sensor Break Protection:	Break detected within two seconds. Control outputs set to OFF (0% power). Alarms operate as if the process variable has gone over-range.
Measurement Accuracy:	?0.1% of span ? 1LSD.
Linearisation Accuracy:	Better than ?0.2?C any point, any 0.1?C range (?0.05?C typical). Better than ?0.5?C any point, any 1?C range.?
Temperature Stability:	0.01% of span/?C change in ambient temperature.
Supply Voltage Influence:	Negligible.
Relative Humidity Influence:	Negligible.
Sensor Resistance Influence:	Pt100 50? /lead: <0.5% of span error.

15.1.4 DC Linear

DC Linear Ranges Available

0 - 20mA	0 - 50mV	0 - 5V
4 - 20mA (default)	10 - 50mV	1 - 5V
		0 - 10V
		2 - 10V

DC Linear Performance

Scale Range Upper Limit:	-1999 to 9999. Decimal point as required.
Scale Range Lower Limit:	-1999 to 9999. Decimal point as for Scale Range Upper Limit.
Minimum Span:	1 display LSD.
Sensor Break Protection:	Applicable to 4 - 20mA, 1 - 5V and 2 - 10V ranges only. Break detected within two seconds. Control outputs set to OFF (0% power); Alarms operate as if the process variable has gone under-range.
Measurement Accuracy:	±0.1% of span ±1LSD.
Temperature stability:	0.01% of span/°C change in ambient temperature.±
Supply Voltage Influence:	Negligible.
Relative Humidity Influence:	Negligible.
Input Protection:	For DC current ranges up to 1A for normal polarity connection.

15.2 Digital Inputs

Type:	Voltage-free or TTL-compatible
Voltage-Free Operation:	<p>Connection to contacts of external switch or relay:</p> <p>Open = SP1(or Auto) selected (minimum contact resistance = 5000Ω),</p> <p>Closed = SP2(or Man) selected (maximum contact resistance = 50Ω).</p>

TTL levels:	2.0V to 24. = SP1 (or Auto) selected -0.6V to 0.8V. = SP2 (or Man) selected
Maximum Input Delay (OFF-ON):	0.25 second.
Maximum Input Delay (ON-OFF):	0.25 second.

15.3 Output Specifications

15.3.1 Output Module Types

Output Option 1 Module Types:	Relay, SSR drive, Triac and DC linear options.
Output Option 2 Module Types:	Relay, Dual Relay, SSR drive, Triac and DC linear options.
Output Option 3 Module Types:	Relay, SSR drive, DC Linear and Transmitter PSU options.

15.3.2 Generic Output Specifications

Relay:	Contact Type:	Single pole double throw (SPDT).
	Control Rating:	2A resistive at 120/240V AC (120V AC for VMD applications). Limit Controller output 1 has fixed 5A latching relay.
	Alarm/EOP Rating:	2A resistive at 120/240V AC
	Control/Alarm Lifetime:	>500,000 operations at rated voltage/current.
	Limit Output Lifetime:	>100,000 operations at rated voltage/current.
	Isolation:	240V mains rated.
SSR Drive:	Drive Capability:	10V minimum at up to 20 mA load.
	Isolation:	Not isolated from input or other SSR drive outputs.
Triac:	Operating Voltage Range:	20 - 280Vrms (47 - 63Hz).
	Current Rating:	0.01 - 1A (full cycle rms. on-state @ 25°C); derates linearly above 40°C to 0.5A @ 80°C.

	Max. Non-repetitive Surge Current (16.6ms):	25A peak.
	Min. OFF-State dv/dt @ Rated Voltage:	500V/? s.
	Max. OFF-State leakage @ Rated Voltage:	1mA rms.
	Max. ON-State Voltage Drop @ Rated Current:	1.5V peak.
	Repetitive Peak OFF-state Voltage, Vdrm:	600V minimum.
Linear DC	Resolution:	Eight bits in 250mS (10 bits in 1 second typical, >10 bits in >1 second typical).
	Update Rate:	Every control algorithm execution.
	Ranges:	0 - 10V 0 - 20mA 0 - 5V 4 - 20mA 2-10V (default)
	Load Impedance:	0 – 20mA & 4 - 20mA: 500? maximum. 0 – 5V, 0 – 10V & 2 – 10V: 500? minimum. Short circuit protected.
	Accuracy:	?0.25% (mA @ 250? , V @ 2k?). Degrades linearly to ?0.5% for increasing burden (to specification limits).
	When used as control output:	For 4 to 20mA and 2 to 10V a 2% over/underdrive is applied (3.68 to 20.32mA and 1.84 to 10.16V).?
	Isolation:	240V mains rated Isolation from all other inputs and outputs.

15.4 Control

Automatic Tuning Types:	Pre-Tune, Self-Tune.
Proportional Bands:	0 (OFF), 0.5% - 999.9% of input span at 0.1% increments.
Automatic Reset (Integral Time Constant):	1s - 99min 59s and OFF.
Rate (Derivative Time Constant):	0 (OFF) - 99 min 59 s.
Manual Reset (Bias):	Added each control algorithm execution. Adjustable in the range 0 - 100% of output power (single output) or -100% to +100% of output power (dual output).
Deadband/Overlap:	-20% to +20% of Proportional Band 1 + Proportional Band 2.
ON/OFF Differential:	0.1% to 10.0% of input span.
Auto/Manual Control:	User-selectable with "bumpless" transfer into and out of Manual Control.
Cycle Times:	Selectable from 0.5s to 512 seconds in binary steps.
Setpoint Range:	Limited by Setpoint Upper Limit and Setpoint Lower Limit.
Setpoint Maximum:	Limited by Setpoint and Scale Range Upper Limit.
Setpoint Minimum:	Limited by Scale Range Lower Limit and Setpoint.
Setpoint Ramp:	Ramp rate selectable 1 - 9999 LSD's per hour and infinite. Number displayed is decimal-point-aligned with display.

15.5 Alarms

Maximum Number of Alarms:	Two "soft" alarms plus Loop Alarm.
Combinatorial Alarms:	Logical OR or AND of alarms to an individual hardware output is available.

15.6 Digital Communications

Type:	Asynchronous Serial.
Protocols:	ASCII and Modbus RTU.
Physical Layer:	RS485.
Zone address range:	1-99 (ASCII), 1-255 (Modbus).
Bit rate:	1200, 2400, 4800, 9600,19200 bps.
Bits per character:	ASCII: 10 Modbus: 10 or 11
Stop bits:	1
Parity:	ASCII: Even (fixed). Modbus: None, even or odd.
Isolation:	240V AC from all other inputs and outputs.

15.7 Reference Conditions

Ambient Temperature:	20°C ±2°C.
Relative Humidity:	60 - 70%.
Supply Voltage:	100 - 240V AC 50Hz ±1%.
Source Resistance:	<10Ω for thermocouple input.
Lead Resistance:	<0.1Ω /lead balanced (Pt100).

15.8 Operating Conditions

Ambient Temperature (operating):	0°C to 55°C.
Ambient Temperature (storage):	-20°C to 80°C.
Relative Humidity:	20% - 95% non-condensing.
Altitude:	Up to 2000m above sea level.
Supply Voltage:	Either 100 - 240V +/- 10% AC 50/60Hz or 20 - 48V AC 50/60Hz or 22 - 55V DC
Power Consumption:	5W / 7.5 VA maximum.
Source Resistance:	1000Ω maximum (thermocouple).
PT100 Input Lead Resistance:	50Ω per lead maximum, balanced

15.9 Standards

Conformance Norms:	CE, UL, ULC.
EMC standards:	EN61326*
Safety Standards:	EN61010 and UL3121
Front Panel Sealing:	IP66

Note:

**For disturbances induced by RF fields of 10V/m 80% AM at 1kHz the input accuracy specification is changed to 0.25% in the frequency bands 465 – 575 MHz and 630 – 660 MHz.*

15.10 Physical Specifications

Dimensions:	Depth:	110mm (1/16 th DIN instruments). 100mm (1/8 th DIN & 1/4 DIN instruments).
	Front panel width:	48mm (1/16 th and 1/8 th DIN instruments). 96mm (1/4 DIN instruments).
	Front panel height:	48mm (1/16 th DIN instruments). 96mm (1/8 th DIN & 1/4 DIN instruments).
Mounting:		Plug-in with panel mounting fixing strap.
Panel cut-out:		45mm x 45mm (1/16 th DIN instruments). 45mm x 92mm (1/8 th DIN instruments). 92mm x 92mm (1/4 DIN instruments).
Terminals:		Screw type (combination head).
Weight:		0.21kg maximum.

16 Appendix 3 - Product Coding

Model Code	Pxxx	-	x	-	x	-	x	-	x	-	xx
Model Type											
1/16 - DIN Controller	1160										
1/8 - DIN Controller	1800										
1/4 - DIN Controller	1400										
Option Slot 1											
Not fitted	0										
Relay Output	1										
DC Drive Output for SSR	2										
Linear 4-20mA DC Output	3										
Triac Output	8										
Option Slot 2											
Not fitted	0										
Relay Output	1										
DC Drive Output for SSR	2										
Linear 4-20mA DC Output	3										
Triac Output	8										
Option Slot 3											
Not fitted	0										
Relay Output	1										
DC Drive Output for SSR	2										
Linear 4-20mA DC Output	3										
Option Slot A											
Not fitted										0	
RS-485 Serial Communications										1	
Green Display										4	
RS-485 Serial										5	
Supply Voltage											
100-240V AC											Blank
24-48V AC or DC											02

DANAHER CONTROLS

1675 Delany Road
Gurnee
IL 60031-1282
USA

Tel:
847 662 2666

Fax:
847 662 6633

www.dancon.com
dancon@dancon.com